


Thermostat

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Drain the powertrain secondary cooling system.
Refer to: Engine Cooling System Draining, Vacuum Filling and Bleeding (303-03C Powertrain Secondary Cooling - 6.7L Power Stroke Diesel, General Procedures).
2. Remove the bolts and the low temperature thermostat cover.
Torque: 53 lb.in (6 Nm)

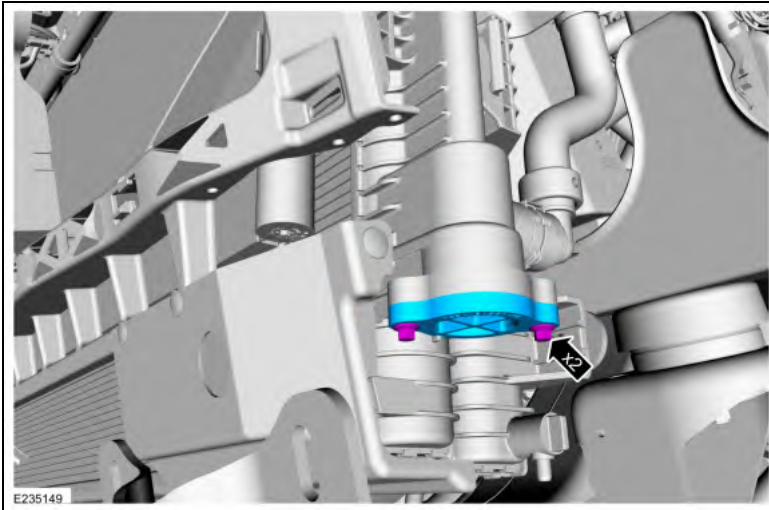

3.
 - Remove and discard the O-ring seal.
 - Remove the low temperature thermostat.



Installation

1. To install, reverse the removal procedure.

NOTICE: Evaluate the cooling system condition before filling the cooling system. Failure to follow these instructions can damage the engine.

2. Evaluate the cooling system condition.
Refer to: Engine Cooling System Condition Evaluation (303-03C Powertrain Secondary Cooling - 6.7L Power Stroke Diesel, General Procedures).

