


Engine Cooling - Component Location

NOTE: Coolant temperature will vary with ambient temperature and load. Temperatures shown are for ambient temperature of 38Â°C (100Â°F). Red arrows indicate a temperature over 90Â°C (194Â°F), Orange arrows indicate a temperature of approximately 90Â°C (194Â°F), Blue arrows indicate a temperature below 90Â°C (194Â°F).

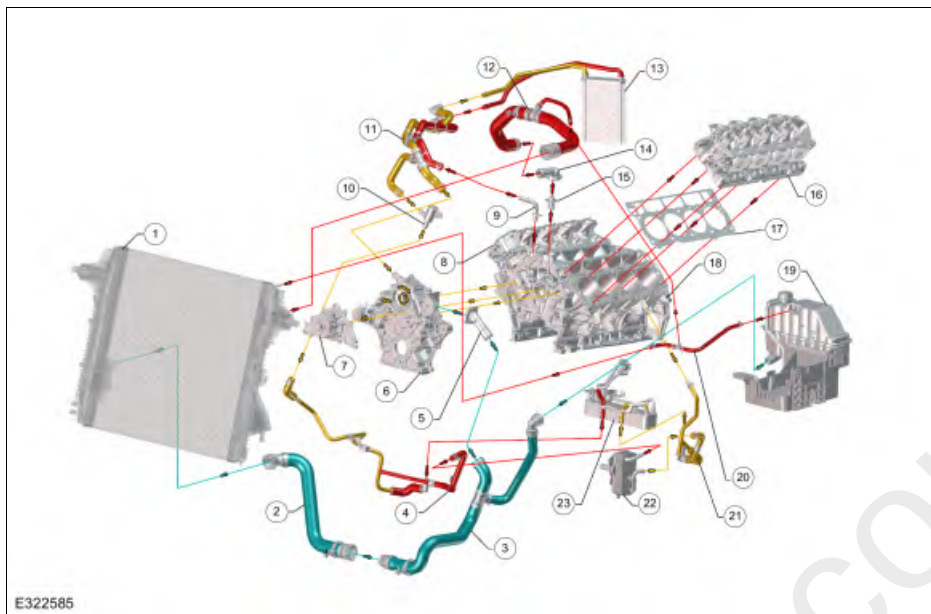

Item	Description
1	Radiator
2	Lower radiator hose
3	Radiator-to-degas bottle hose
4	Transmission oil cooler outlet hose
5	Coolant inlet connector
6	Front cover assembly
7	Coolant pump
8	Cylinder head RH
9	Heater inlet hose
10	Transmission fluid heater coolant control valve
11	Heater hose assembly
12	Upper radiator hose
13	Heater core
14	Coolant outlet connector
15	Thermostat
16	Cylinder head LH
17	Cylinder head gasket LH
18	Cylinder block
19	Degas bottle
20	Radiator overflow hose
21	Transmission oil cooler inlet hose
22	Engine oil cooler
23	Transmission oil cooler

