

Fuel Injectors

Removal and Installation

1. The fuel injectors are serviced with the fuel rail.
Refer to: Fuel Rail (303-04A Fuel Charging and Controls - 6.2L V8, Removal and Installation).
-

mcx30.com