

Fuel Pump Driver Module (FPDM)

Removal


All vehicles

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).


Pickup

NOTE: The fuel pump driver module (FPDM) is attached to the top of the frame rear crossmember.

2. Disconnect the fuel pump driver module (FPDM) electrical connector.

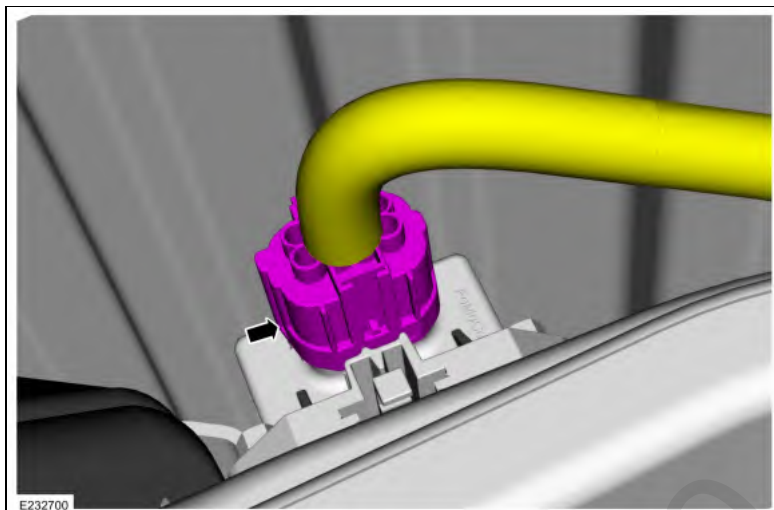


3. Remove the fuel pump driver module (FPDM) retainers and then remove the fuel pump driver module (FPDM).

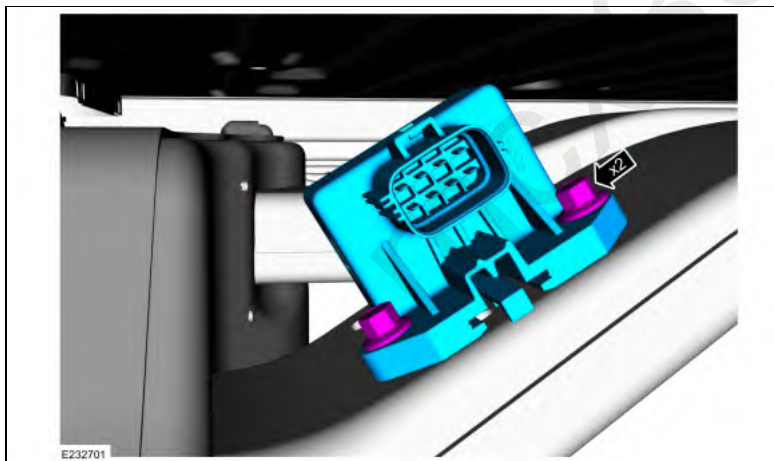


Chassis Cab

NOTE: The fuel pump driver module (FPDM) is attached to the front of the frame rear crossmember.

4. Disconnect the fuel pump driver module (FPDM) electrical connector.

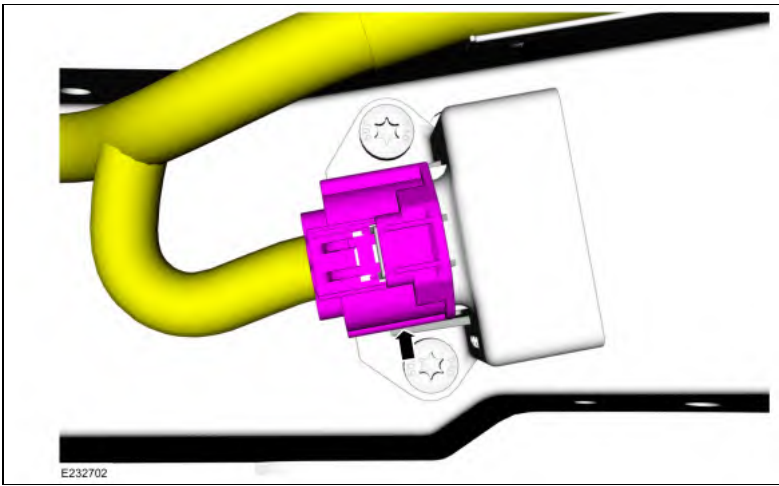


5. Remove the fuel pump driver module (FPDM) retainers and then remove the fuel pump driver module (FPDM).

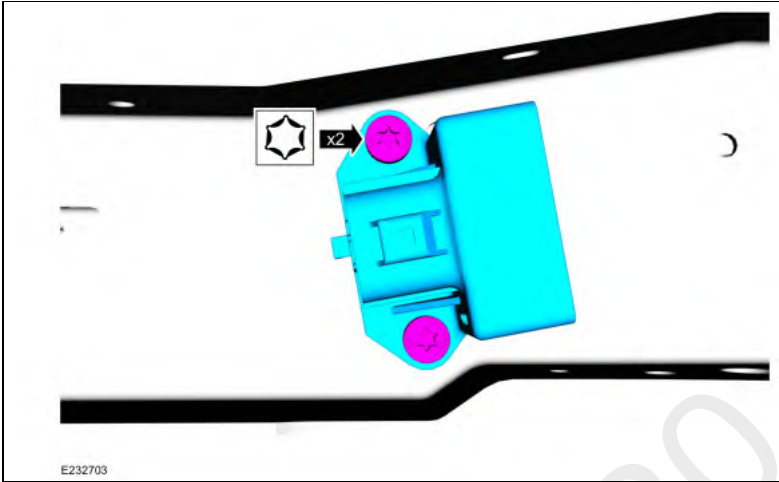


Installation

Pickup

1. Install the fuel pump driver module (FPDM), then install and tighten the fuel pump driver module (FPDM) retainers.
Torque: 71 lb.in (8 Nm)

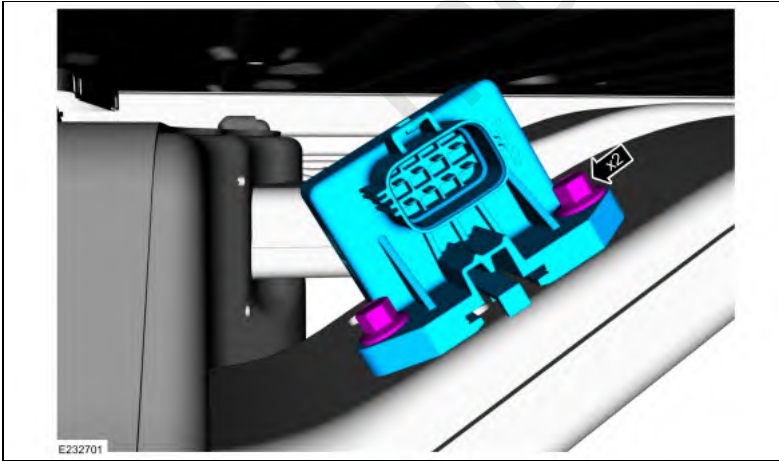


2. Connect the fuel pump driver module (FPDM) electrical connector.

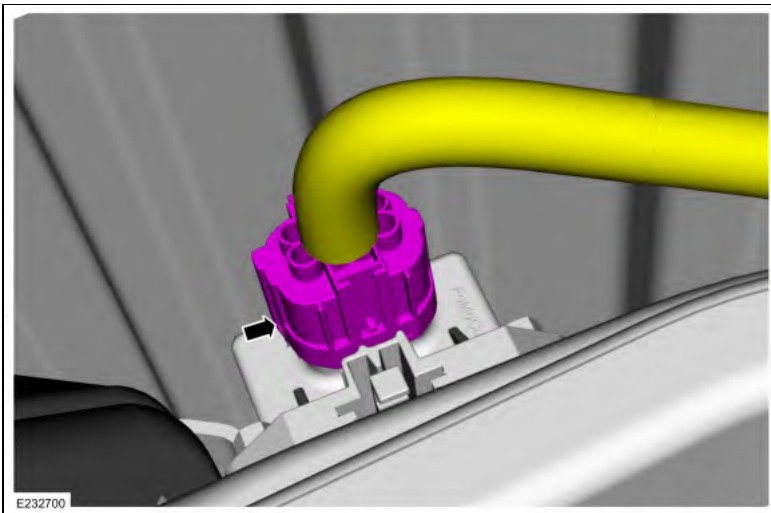


Chassis Cab

3. Install the fuel pump driver module, then install and tighten the fuel pump driver module retainers.
Torque: 71 lb.in (8 Nm)

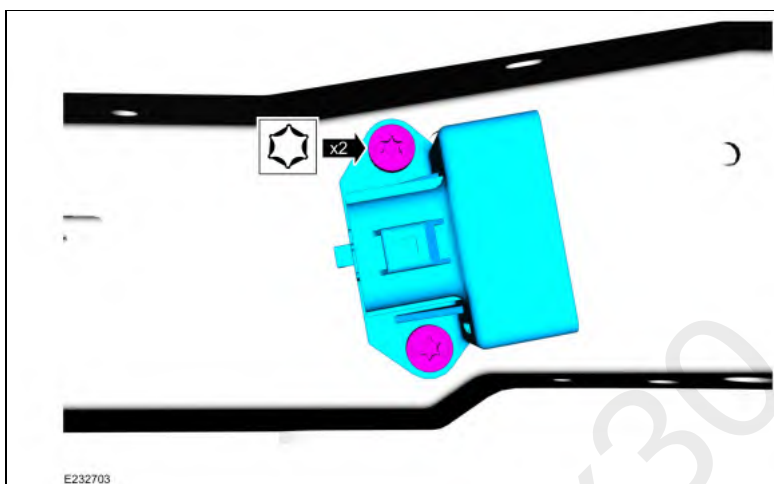

4. Connect the fuel pump driver module electrical connector.

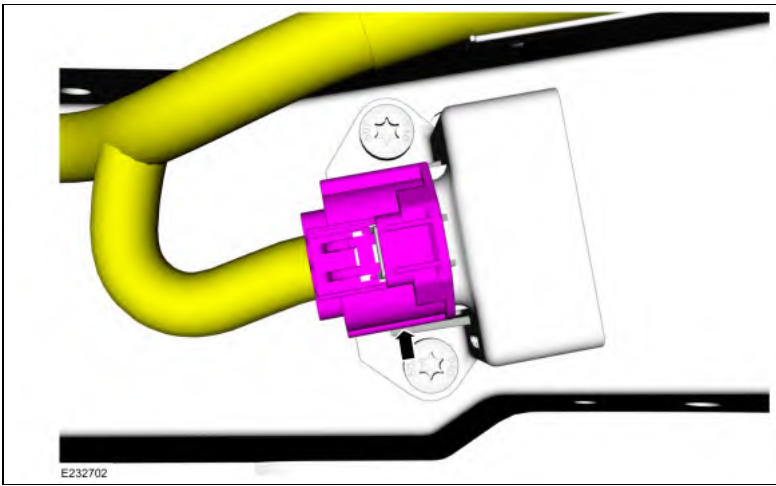

mcx30.com