

Fuel Injectors

Removal and Installation

1. The fuel injectors are removed with the fuel rail.
Refer to: Fuel Rail LH (303-04D Fuel Charging and Controls - 7.3L 2V DEVCT V8 (239kW/320PS) (J0), Removal and Installation).
Refer to: Fuel Rail RH (303-04D Fuel Charging and Controls - 7.3L 2V DEVCT V8 (239kW/320PS) (J0), Removal and Installation).
-

mcx30.com