

Fuel Pump Driver Module (FPDM)

Removal


All vehicles

- 1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).


Pickup

NOTE: The fuel pump driver module (FPDM) is attached to the top of the frame rear crossmember.

- 2. Disconnect the fuel pump driver module (FPDM) electrical connector.

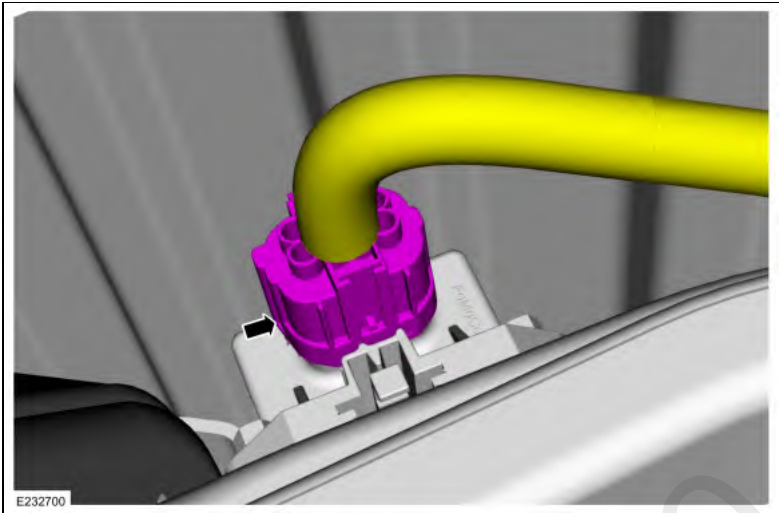


- 3. Remove the fuel pump driver module (FPDM) retainers and then remove the fuel pump driver module (FPDM).

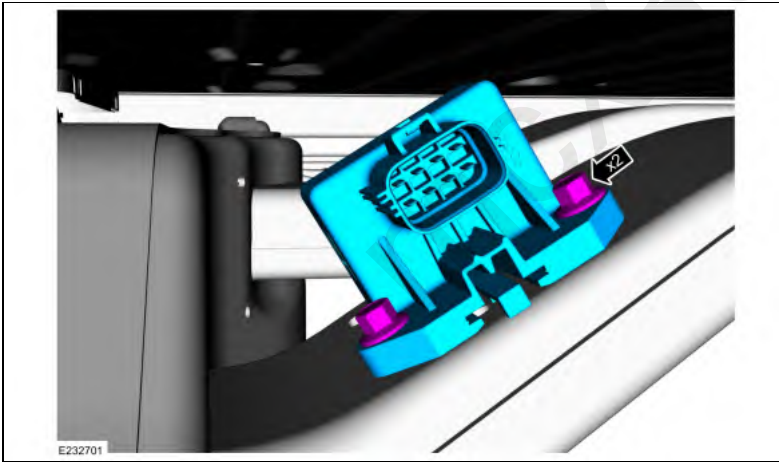

Chassis Cab


NOTE: The fuel pump driver module (FPDM) is attached to the front of the frame rear crossmember.

- 4. Disconnect the fuel pump driver module (FPDM) electrical connector.

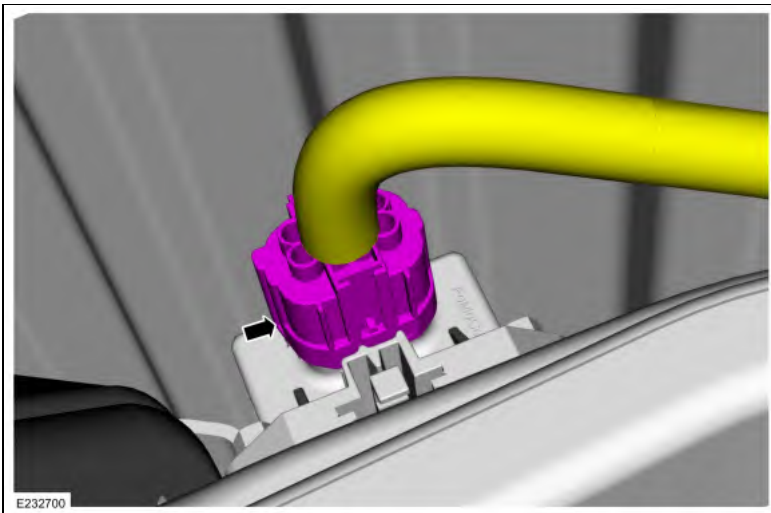


Chassis Cab

3. Install the fuel pump driver module, then install and tighten the fuel pump driver module retainers.
Torque: 71 lb.in (8 Nm)

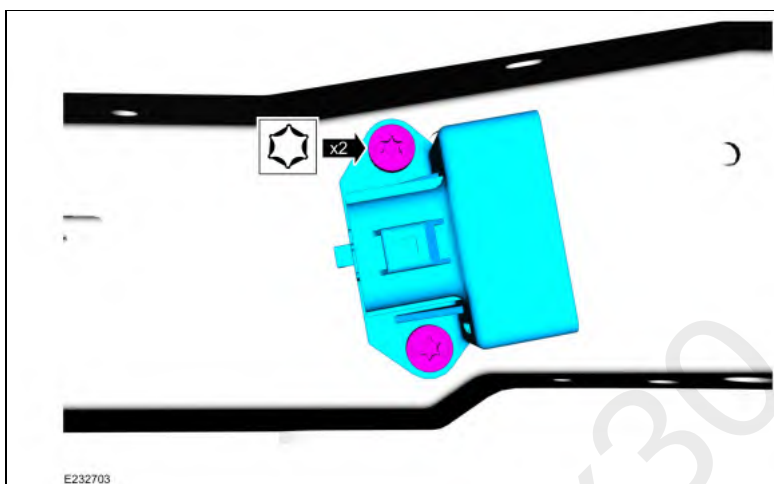

4. Connect the fuel pump driver module electrical connector.

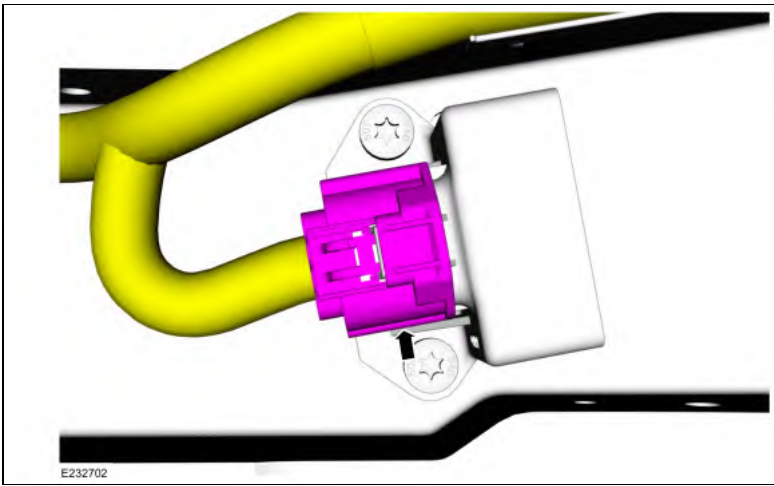

mcx30.com