



Throttle Body

Removal


1. Remove the air cleaner outlet pipe.
Refer to: Air Cleaner Outlet Pipe (303-12A Intake Air Distribution and Filtering - 6.2L V8, Removal and Installation).
2. Disconnect the throttle body electrical connector.

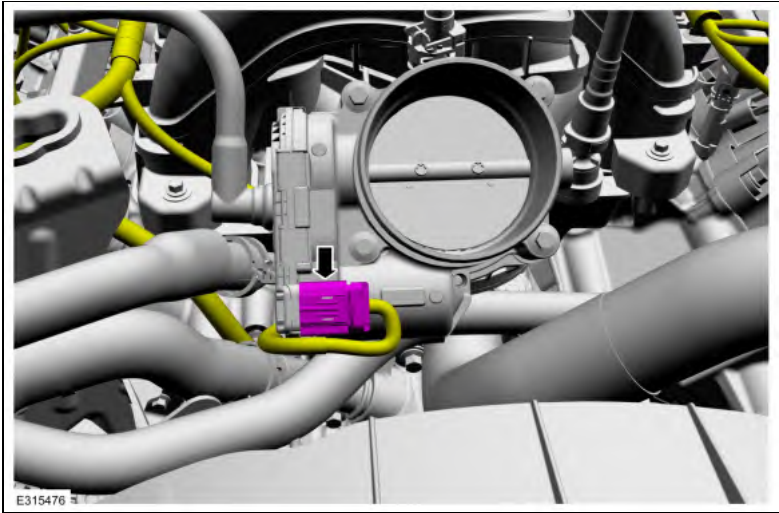

3. Remove the throttle body bolts and then remove the throttle body.

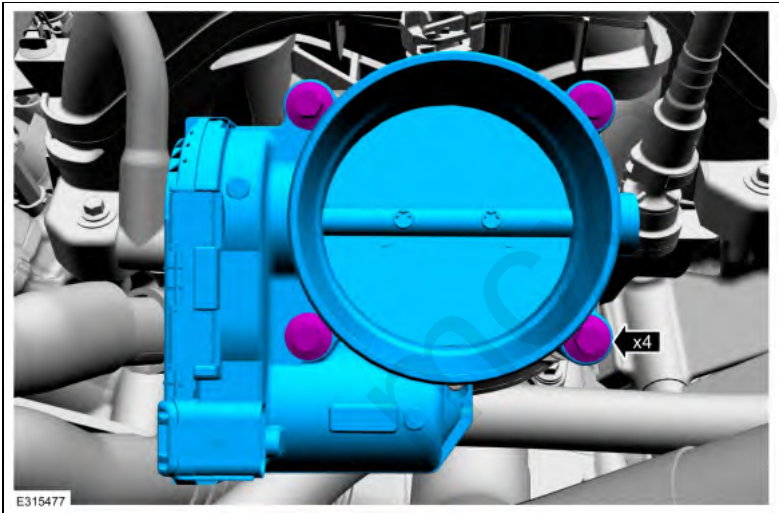


4. Inspect the throttle body gasket, clean or replace as needed. Clean the mating surfaces.


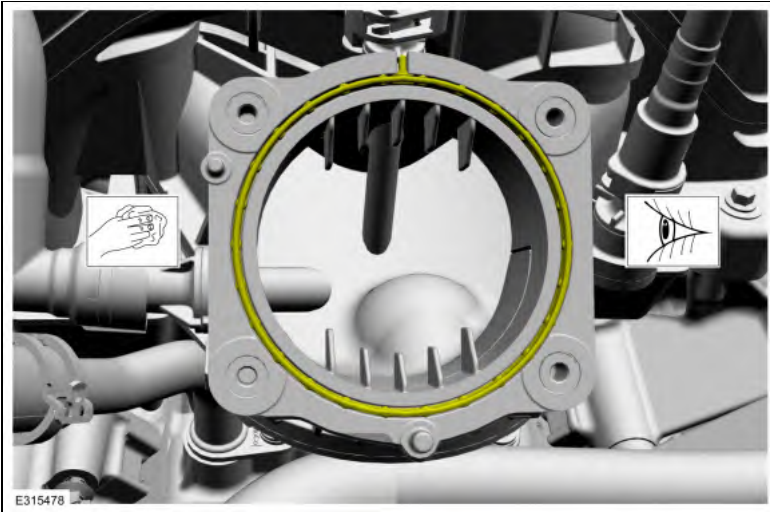


Installation

1. Install the throttle body, then install and tighten throttle body bolts in the following 2 stages.
Torque:
Stage 1: Tighten to: : 89 lb.in (10 Nm)
Stage 2: Tighten an additional: : 60°

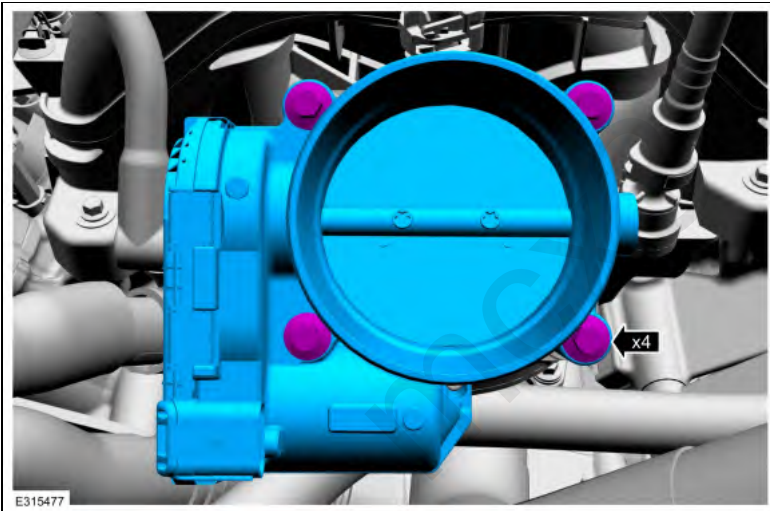

 2. Connect the throttle body electrical connector.

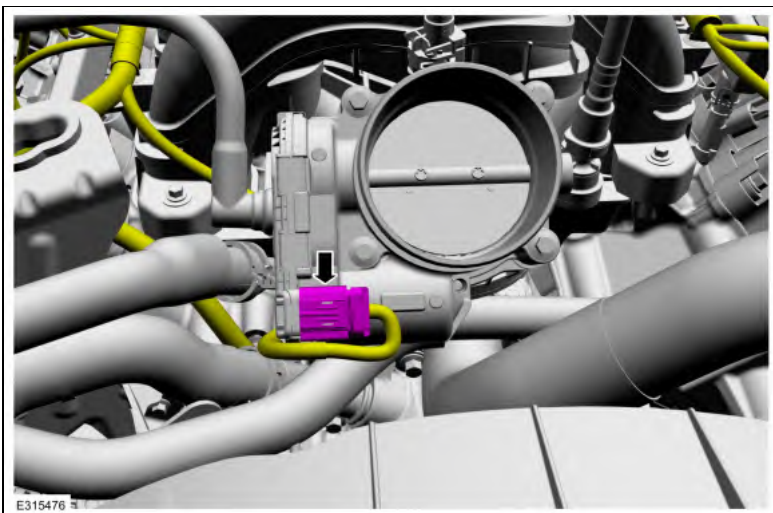

3. Install the air cleaner outlet pipe.
Refer to: Air Cleaner Outlet Pipe (303-12A Intake Air Distribution and Filtering - 6.2L V8, Removal and Installation).

mcx30.com