

Accessory Drive Belt


Removal

NOTE: Under no circumstances should the accessory drive belt, tensioner or pulleys be lubricated as potential damage to the belt material and tensioner damping mechanism will occur. Do not apply any fluids or belt dressing to the accessory drive belt or pulleys.

1. Remove the air cleaner outlet pipe.
Refer to: Air Cleaner Outlet Pipe (303-12B Intake Air Distribution and Filtering - 6.7L Power Stroke Diesel, Removal and Installation).
2. Remove the cooling fan.
3. Remove the following items:

1. From the top of engine, rotate the accessory drive belt tensioner clockwise.

2. Remove the accessory drive belt.

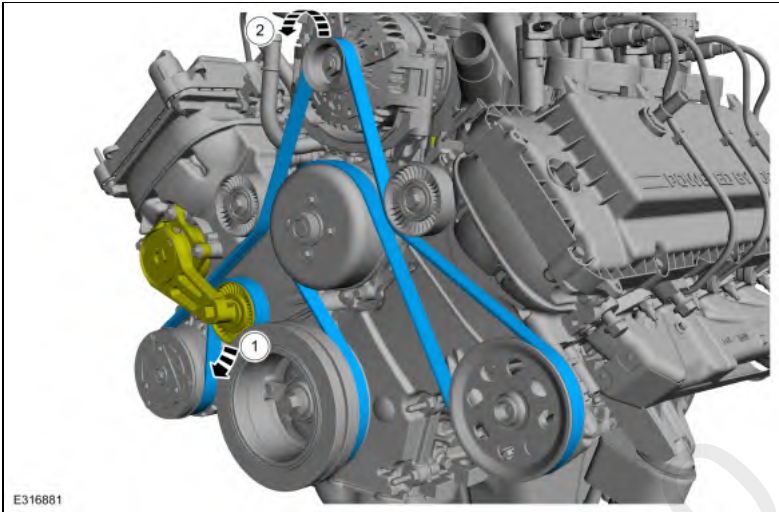

Installation

1. To install, reverse the removal procedure.
2. After installation, make sure the accessory drive belt is correctly seated on all pulleys.

