


## Accessory Drive Belt Tensioner

### Removal

**NOTICE:** Under no circumstances should the accessory drive belt, tensioner or pulleys be lubricated as potential damage to the belt material and tensioner damping mechanism will occur. Do not apply any fluids or belt dressing to the accessory drive belt or pulleys.

**NOTE:** Removal steps in this procedure may contain installation details.

1. Remove the accessory drive belt.  
Refer to: Accessory Drive Belt (303-05A Accessory Drive - 6.2L V8, Removal and Installation).
2. Remove the bolts and the accessory drive belt tensioner.  
*Torque: 18 lb.ft (25 Nm)*

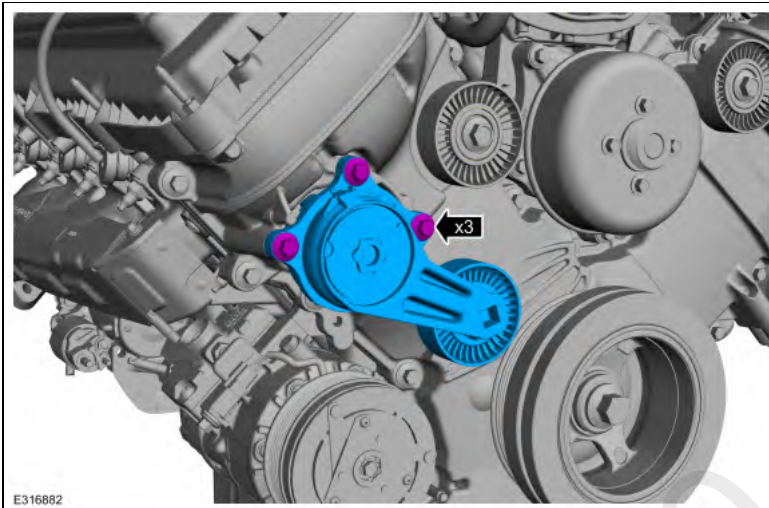

### Installation

1. To install, reverse the removal procedure.