


Accessory Drive Belt - Vehicles With: Single Generator

Removal

NOTICE: Under no circumstances should the accessory drive belt, tensioner or pulleys be lubricated as potential damage to the belt material and tensioner damping mechanism will occur. Do not apply any fluids or belt dressing to the accessory drive belt or pulleys.

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the air cleaner outlet pipe.
Refer to: Air Cleaner Outlet Pipe (303-12C Intake Air Distribution and Filtering - 7.3L 2V DEVCT V8 (239kW/320PS) (J0), Removal and Installation).
2. Remove the cooling fan.
Refer to: Cooling Fan (303-03D Engine Cooling - 7.3L 2V DEVCT V8 (239kW/320PS) (J0), Removal and Installation).
3. Remove the following items:
 1. Rotate the accessory drive belt tensioner clockwise.
 2. Remove the accessory drive belt.

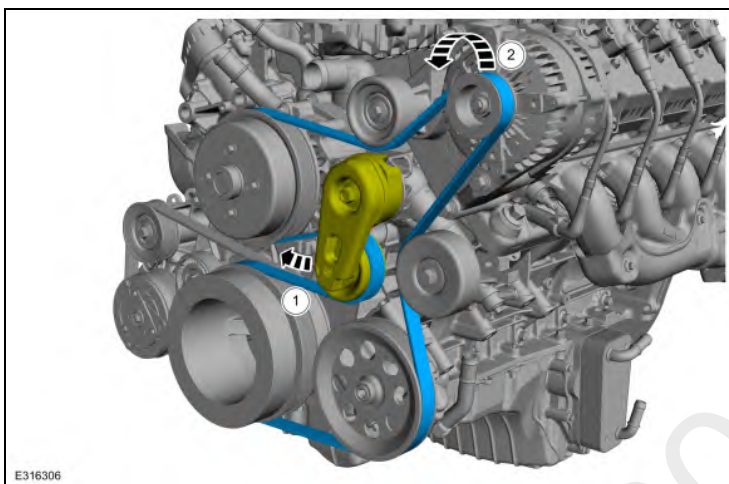


Installation

1. To install, reverse the removal procedure.
2. **NOTE:** For additional information, refer to Accessory Drive in the Description and Operation portion of this section for correct drive belt routing.

After installation, make sure the accessory drive belt is correctly seated on all pulleys.

Refer to: Accessory Drive - Component Location (303-05C Accessory Drive - 7.3L 2V DEVCT V8 (239kW/320PS) (J0), Description and Operation).

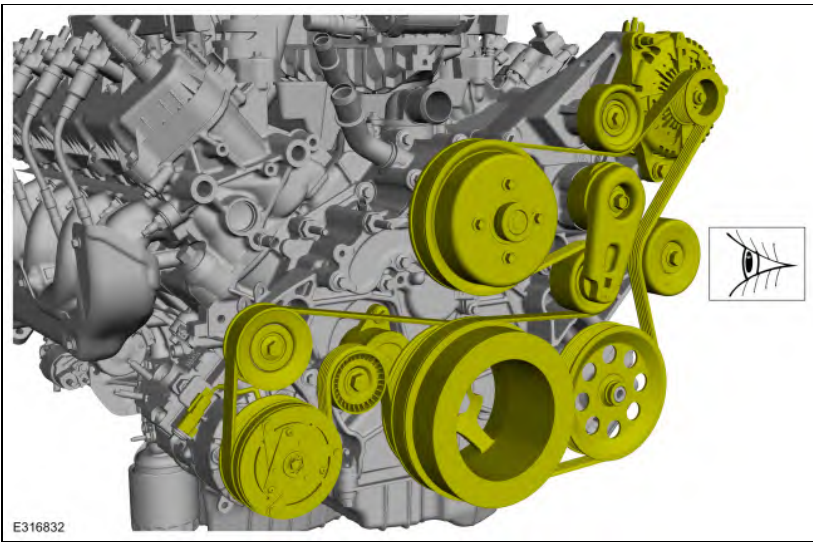

mcx30.com