


Air Conditioning (A/C) Compressor Belt

Removal

NOTICE: Under no circumstances should the accessory drive belt, tensioner or pulleys be lubricated as potential damage to the belt material and tensioner damping mechanism will occur. Do not apply any fluids or belt dressing to the accessory drive belt or pulleys.

1. Remove the accessory drive belt.
Refer to: Accessory Drive Belt - Vehicles With: Single Generator (303-05C Accessory Drive - 7.3L 2V DEVCT V8 (239kW/320PS) (J0), Removal and Installation).
Refer to: Accessory Drive Belt - Vehicles With: Dual Generators (303-05C Accessory Drive - 7.3L 2V DEVCT V8 (239kW/320PS) (J0), Removal and Installation).
2. Rotate the tensioner counter clockwise.
3. Remove the A/C compressor belt.

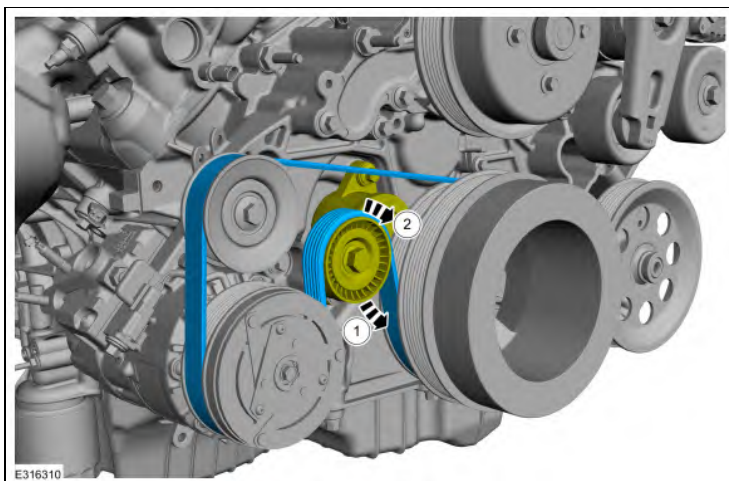

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** For additional information, refer to Accessory Drive in the Description and Operation portion of this section for correct drive belt routing.

After installation, make sure the both the A/C drive belt and the accessory drive belt is correctly seated on all pulleys.

Refer to: Accessory Drive - Component Location (303-05C Accessory Drive - 7.3L 2V DEVCT V8 (239kW/320PS) (J0), Description and Operation).

