


Air Conditioning (A/C) Compressor Belt Tensioner

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the A/C Compressor drive belt.
Refer to: Air Conditioning (A/C) Compressor Belt (303-05C Accessory Drive - 7.3L 2V DEVCT V8 (239kW/320PS) (J0), Removal and Installation).
2. Remove the A/C compressor belt tensioner.
Torque: 18 lb.ft (25 Nm)

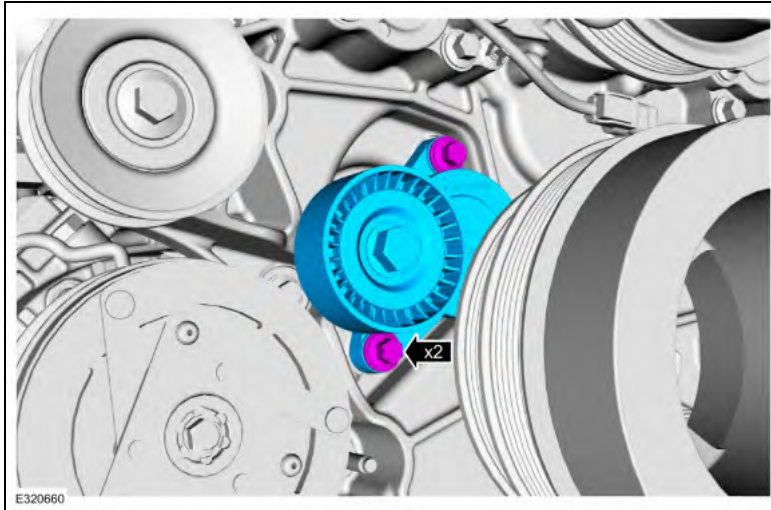

Installation

1. To install, reverse the removal procedure.