

Starting System - Overview

Starting System

The starting system controls the cranking of the engine. When the PCM receives inputs from the ignition switch, transmission (with automatic transmission) or clutch pedal position switch (with manual transmission), run/start relay and the BCM it then energizes the BJB starter relay. When the starter relay is energized it applies power to the starter motor which cranks the engine.

Remote Start

If equipped, with a remote start system, refer to the owners literature and Refer to: Handles, Locks, Latches and Entry Systems - System Operation and Component Description (501-14 Handles, Locks, Latches and Entry Systems, Description and Operation).

mcx30.com