

Engine Ignition

Diagnostics in this manual assume a certain skill level and knowledge of Ford-specific diagnostic practices. For information about these, REFER to: Diagnostic Methods (100-00 General Information, Description and Operation).

For a PCM DTC,
REFER to: Electronic Engine Controls (303-14A Electronic Engine Controls - 6.2L V8, Diagnosis and Testing).

For driveability symptoms without a DTC, Refer to Powertrain Control/Emissions Diagnosis (PC/ED) manual. See Section 3, Symptom Charts.

mcx30.com