



Spark Plug Wires

Removal

1. **NOTE:** When removing the spark plug wires from the spark plugs, a slight twisting motion will break the seal and ease removal.
 - Use compressed air to remove any foreign material from the spark plug wires and surrounding area before removing the spark plug wires.
 - Detach the RH side spark plug wire retainers.
 - Disconnect and RH the right spark plug wires from the spark plugs.

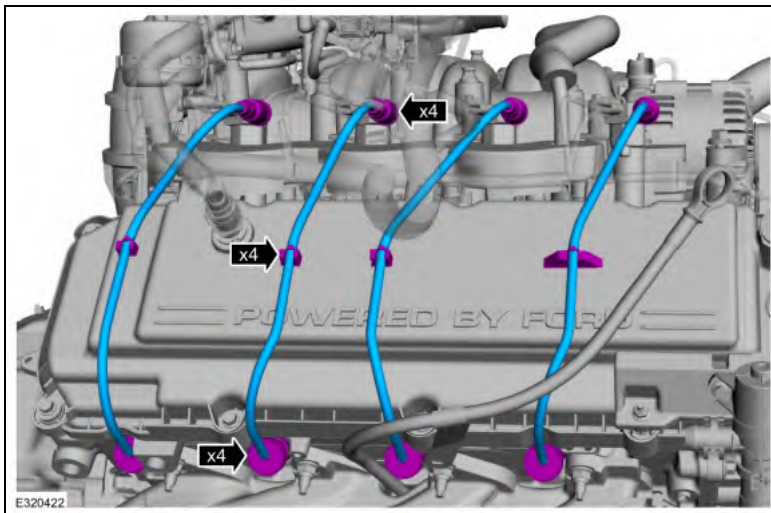


2. **NOTE:** When removing the spark plug wires from the spark plugs, a slight twisting motion will break the seal and ease removal.
 - Use compressed air to remove any foreign material from the spark plug wires and surrounding area before removing the spark plug wires.
 - Detach the LH side spark plug wire retainers.
 - Disconnect and remove the LH spark plug wires from the spark plugs.

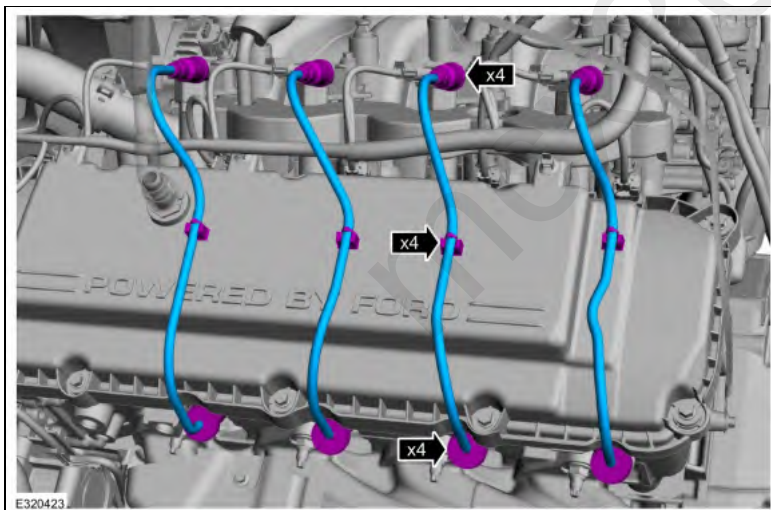

Installation

1.
 - Install and connect the LH spark plug wires to the spark plugs.
 - Attach LH the spark plug wire retainers.

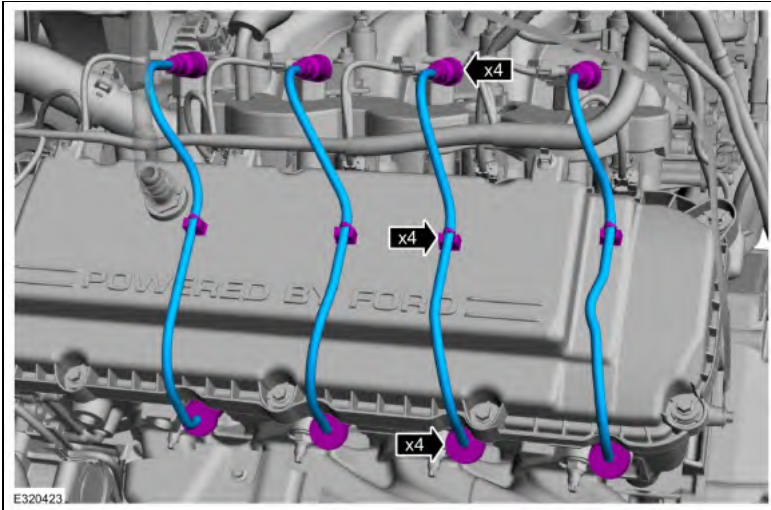

2.
 - Install and connect the RH spark plug wires to the spark plugs.
 - Attach RH the spark plug wire retainers.

