

Spark Plug Wires

Removal


1. Use compressed air to remove any foreign material from the spark plug wires and surrounding area before removing the spark plug wires.
2. **NOTE:** When removing the spark plug wires from the ignition coils, a slight twisting motion will break the seal and ease removal.
Disconnect the LH spark plug wires from the ignition coils.

3. **NOTE:** When removing the spark plug wires from the spark plugs, a slight twisting motion will break the seal and ease removal.

NOTE: Do not use standard wrenches or pliers to remove the spark plug wire as they will damage the cables or metal shields.

NOTE: Do not rock the spark plug wire up or down.

Grasp the end of spark plug wire at metal shield as close to spark plug as possible and pull in direction away from engine and remove the spark plug wires.

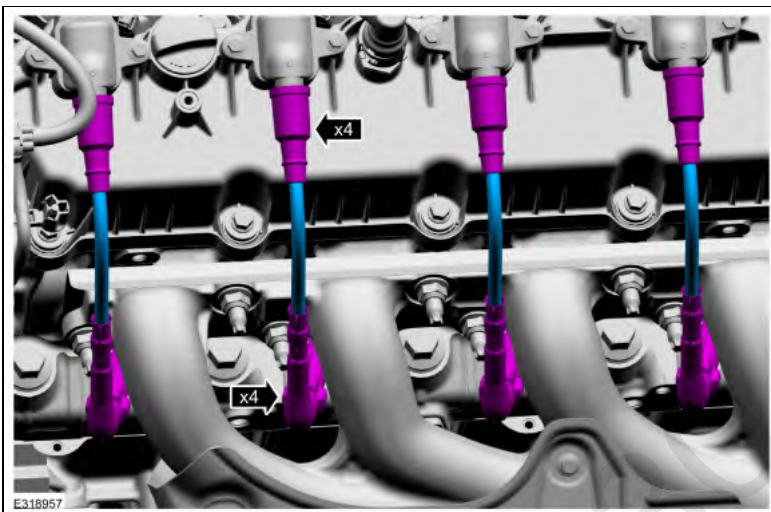


2. Use compressed air to remove any foreign material from the spark plug wires and surrounding area before removing the spark plug wires.
2. **NOTE:** When removing the spark plug wires from the ignition coils, a slight twisting motion will break the seal and ease removal.
Disconnect the RH spark plug wires from the ignition coils.

3. **NOTE:** When removing the spark plug wires from the spark plugs, a slight twisting motion will break the seal and ease removal.



NOTE: Do not use standard wrenches or pliers to remove the spark plug wire as they will damage the cables or metal shields.

NOTE: Do not rock the spark plug wire up or down.

Grasp the end of spark plug wire at metal shield as close to spark plug as possible and pull in direction away from engine and remove the spark plug wires.

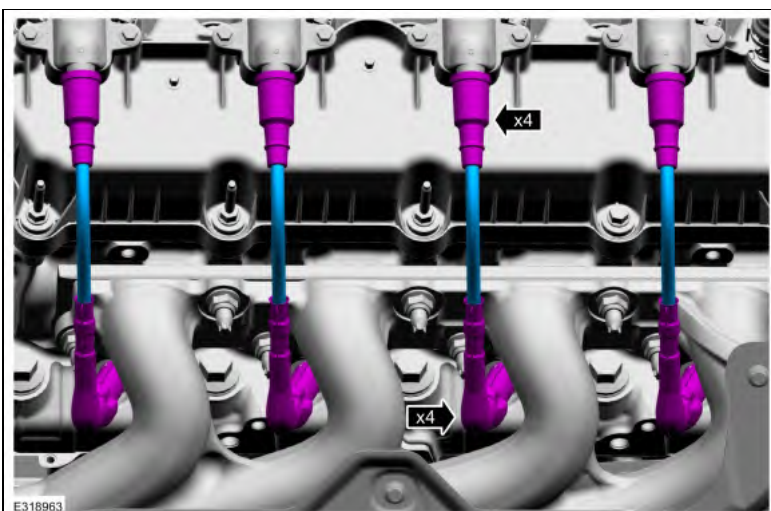

3. Inspect the spark plug wires for cracks, carbon tracking, dirt and separation of the metal shield as the metal shield is required for thermal protection. Replace any damaged spark plug wires.

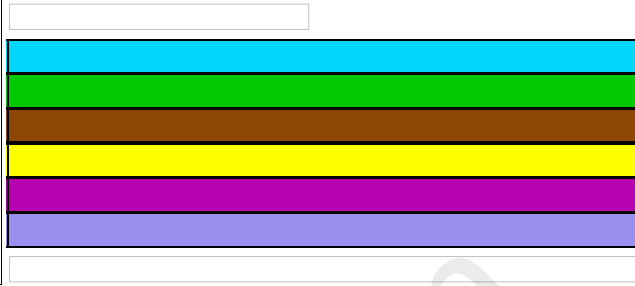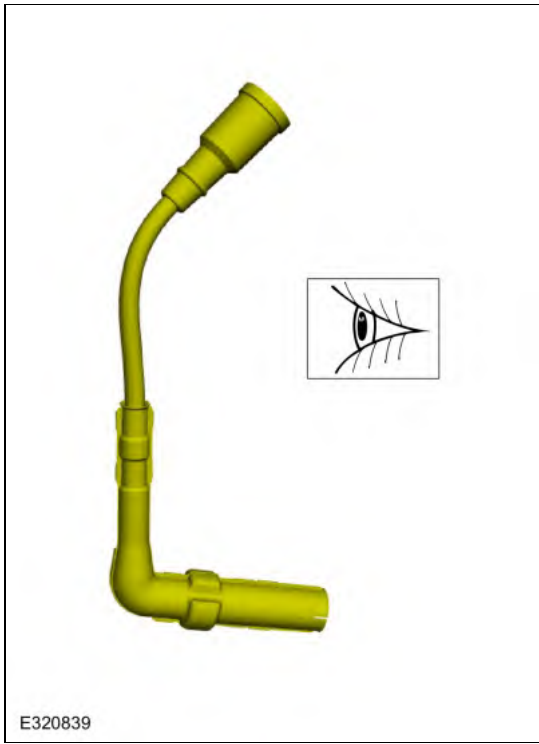

Installation

1. To install, reverse the removal procedure.

mcx30.com