

Ignition Coil


Removal

NOTE: RH shown, LH similar.


NOTE: Removal steps in this procedure may contain installation details.

1.
1. Disconnect the wiring harness electrical connectors from the ignition coils.

2. **NOTE:** When removing the spark plug wires from the ignition coils, a slight twisting motion will break the seal and ease removal.
- Disconnect the spark plug wires from the ignition coils.

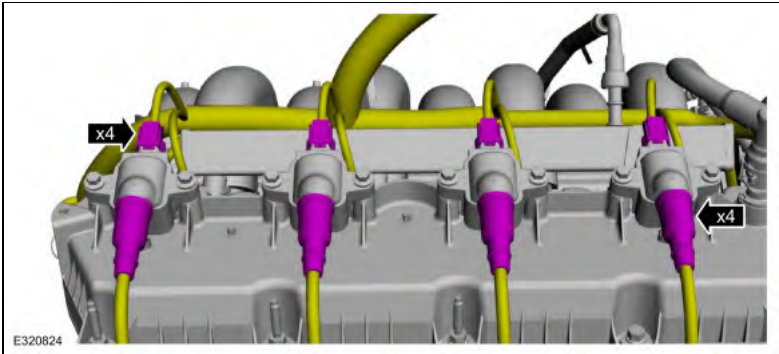

2. Remove the bolts and the ignition coils.
- Torque:
- Stage 1: 62 lb.in (7 Nm)
- Stage 2: 45Â°

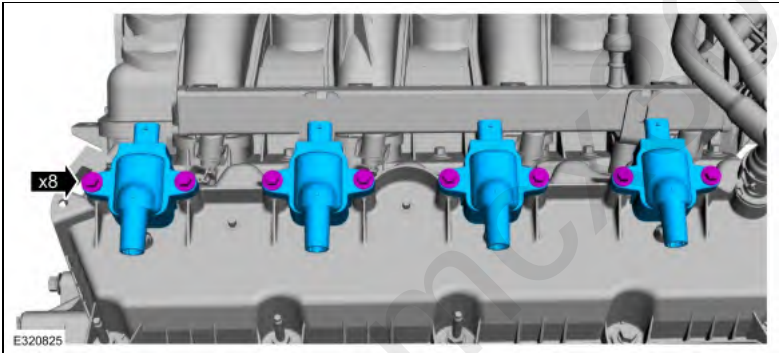

Installation

1. To install, reverse the removal procedure.