


Positive Crankcase Ventilation (PCV) Valve


Removal

1. Disconnect the PCV (positive crankcase ventilation) valve quick release coupling.
Refer to: Quick Release Coupling (310-00 Fuel System - General Information - 7.3L 2V DEVCT V8 (239kW/320PS) (J0)) .

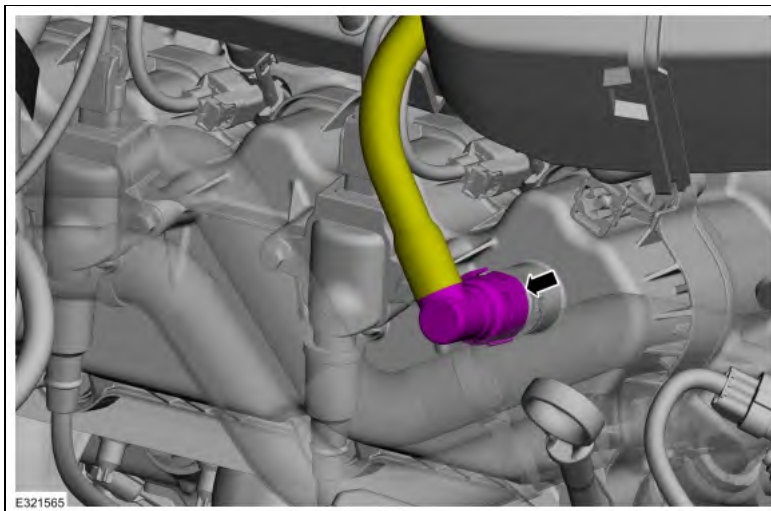


2. **NOTICE:** When the PCV (positive crankcase ventilation) valve is removed, damage will occur to the locking mechanism and a new PCV (positive crankcase ventilation) valve must be installed.

Rotate the PCV (positive crankcase ventilation) valve counterclockwise, remove and discard the PCV (positive crankcase ventilation) valve.

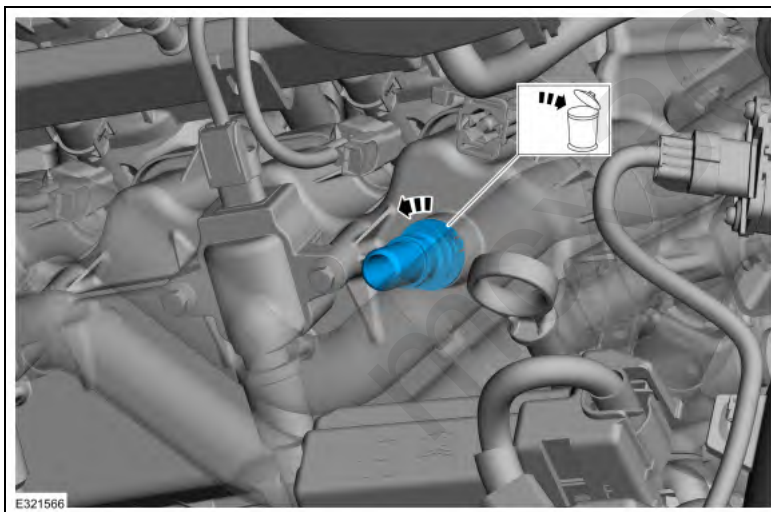


Installation


1. Lubricate the new PCV (positive crankcase ventilation) valve O-ring seal with clean engine oil.

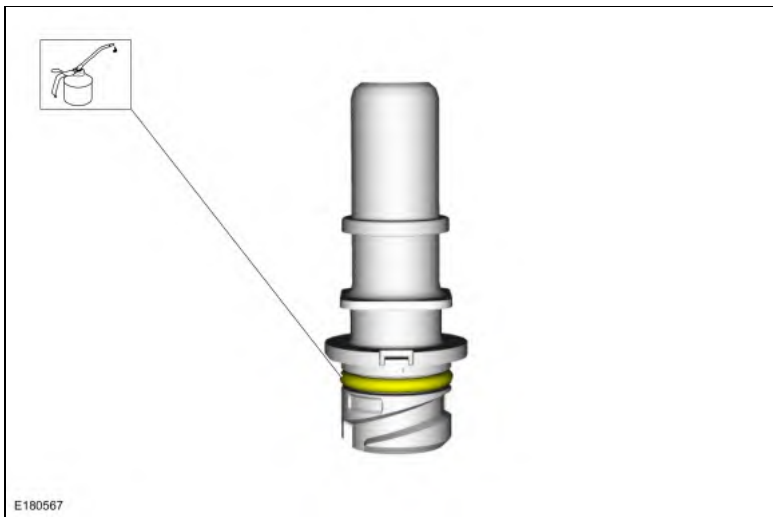

2. Install and Rotate the PCV (positive crankcase ventilation) valve clockwise.

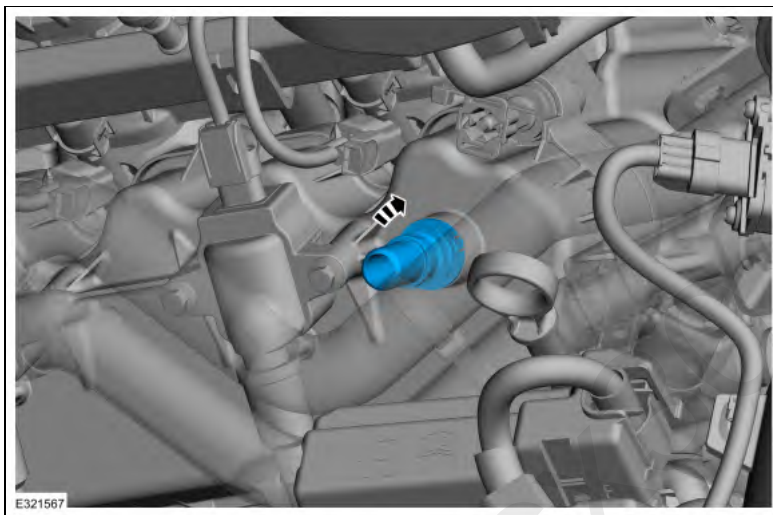

3. Connect the PCV (positive crankcase ventilation) valve quick release coupling.
Refer to: Quick Release Coupling (310-00 Fuel System - General Information - 7.3L 2V DEVCT V8 (239kW/320PS) (J0)).

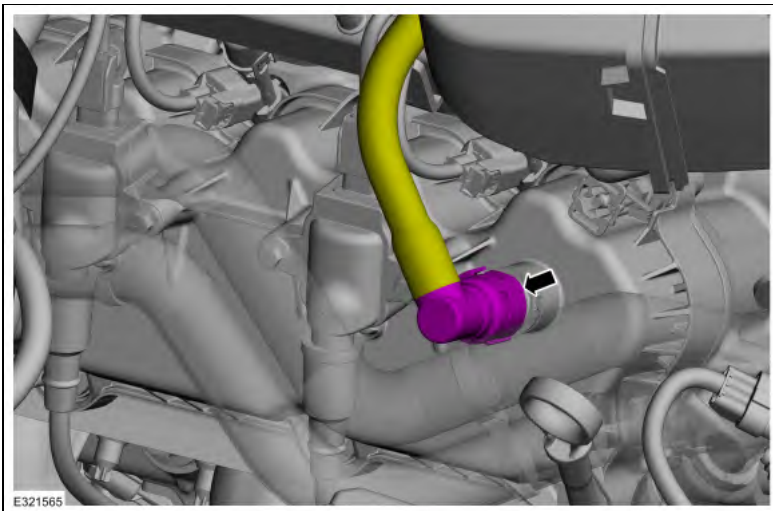

mcx30.com