


Air Cleaner


Removal

NOTE: Removal steps in this procedure may contain installation details.

- 1. Loosen the clamp and disconnect the air cleaner outlet pipe.
Torque: 44 lb.in (5 Nm)

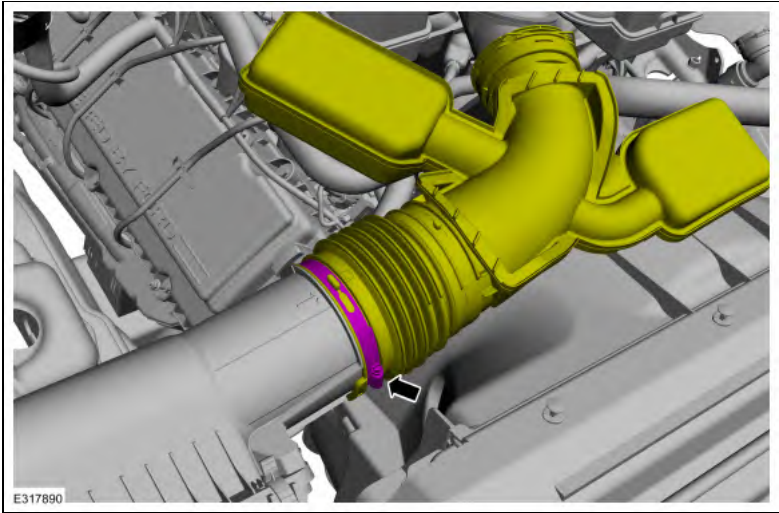

- 2. Remove the following items:
 - 1. Detach the clip and position aside the intake hose.
 - 2. Pull out the air cleaner assembly vertically out from the rubber grommets.

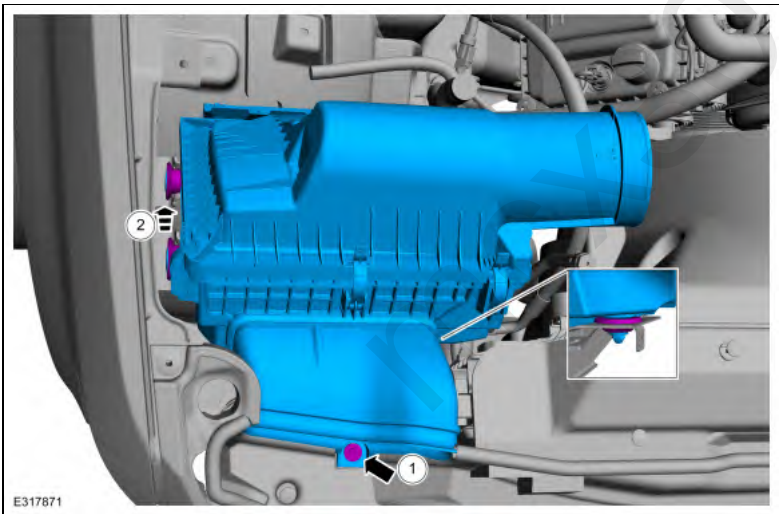

Installation

- 1. To install, reverse the removal procedure.

