


Air Cleaner Outlet Pipe

Removal


NOTICE: The turbocharger compressor vanes can be damaged by even the smallest particles. When removing any turbocharger or engine air intake system component, ensure that no debris enters the system. Failure to do so may result in damage to the turbocharger.

NOTE: Removal steps in this procedure may contain installation details.

1. Detach the hose.

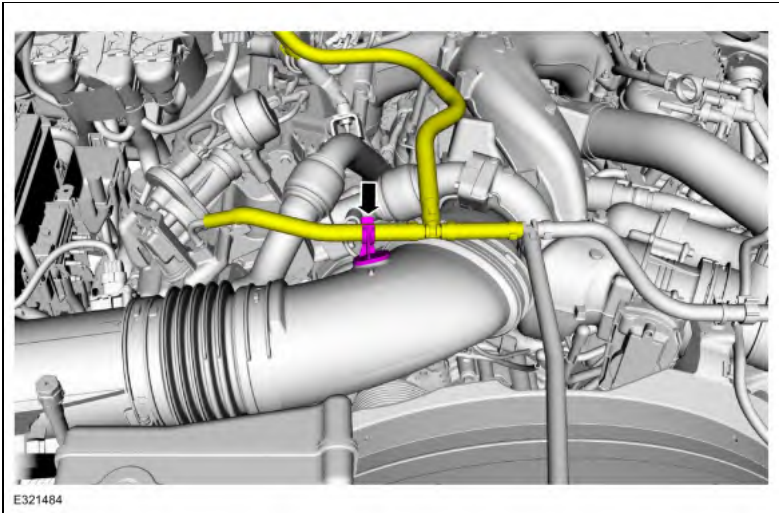

2. Loosen the clamps and remove the air cleaner outlet pipe.
Torque: 35 lb.in (4 Nm)

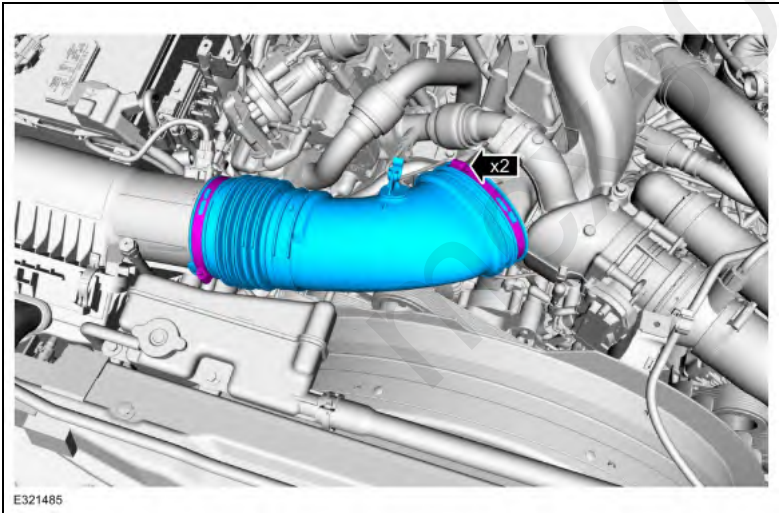

Installation

1. Inspect the turbocharger or engine air intake system components and clean, if necessary.
2. To install, reverse the removal procedure.

