


Air Cleaner


Removal

NOTE: Removal steps in this procedure may contain installation details.



1. Remove the air cleaner outlet pipe.
Refer to: Air Cleaner Outlet Pipe (303-12C Intake Air Distribution and Filtering - 7.3L 2V DEVCT V8 (239kW/320PS) (J0), Removal and Installation).
2. Remove the pushpin and the air cleaner inlet pipe.

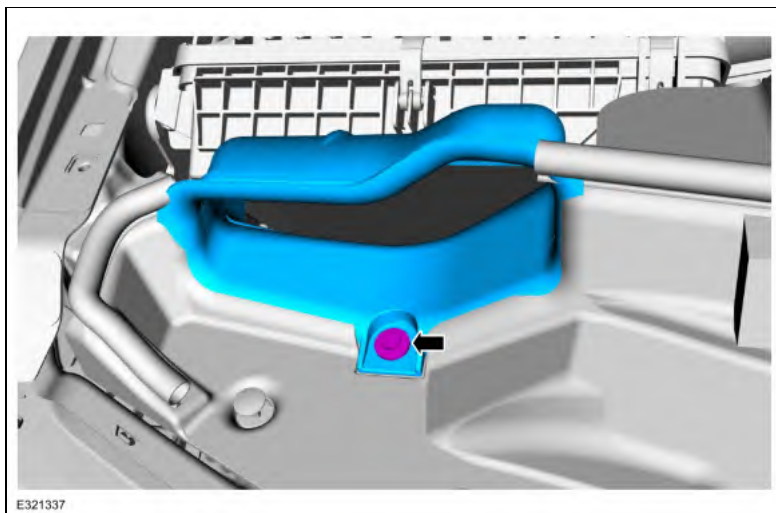

3. Disconnect the MAF sensor electrical connector and detach the wiring harness retainer.

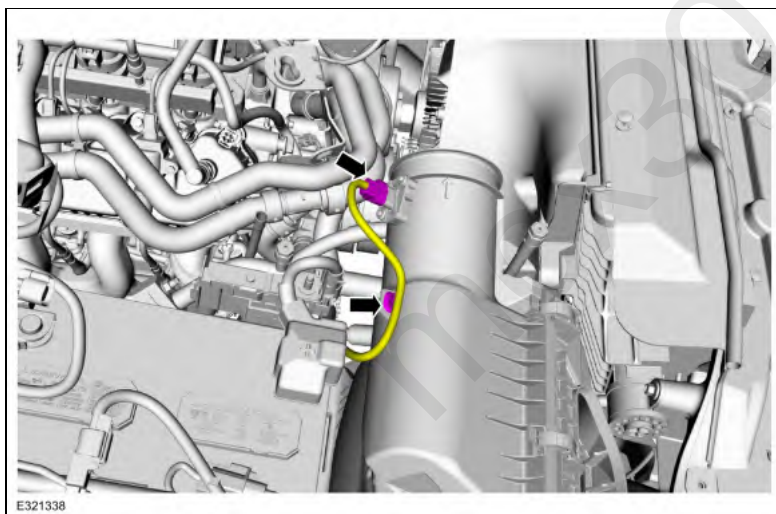

 4. Remove the air cleaner.
 1. Release the bottom air cleaner grommet.
 2. Slide the air cleaner side grommets up and out of the bracket. Remove the air cleaner.

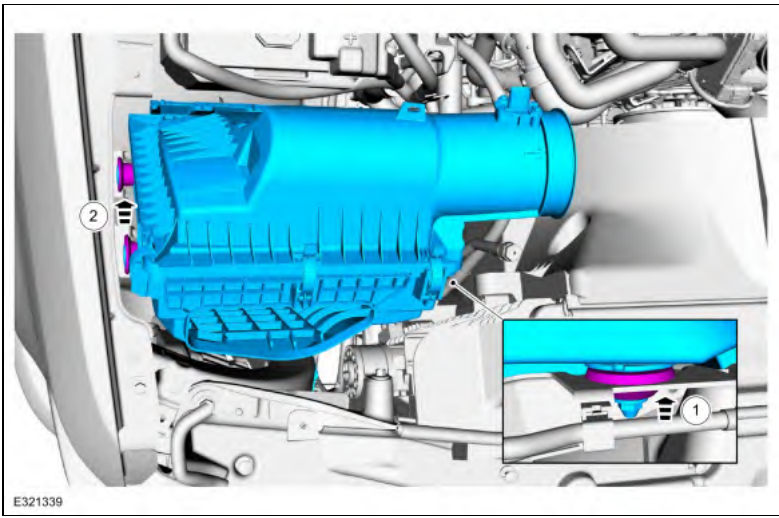

Installation

- 1. To install, reverse the removal procedure.

mcx30.com