


Air Cleaner Outlet Pipe


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Disconnect the vacuum and crankcase vent hose quick connect couplings.
Refer to: Quick Release Coupling (310-00D) .

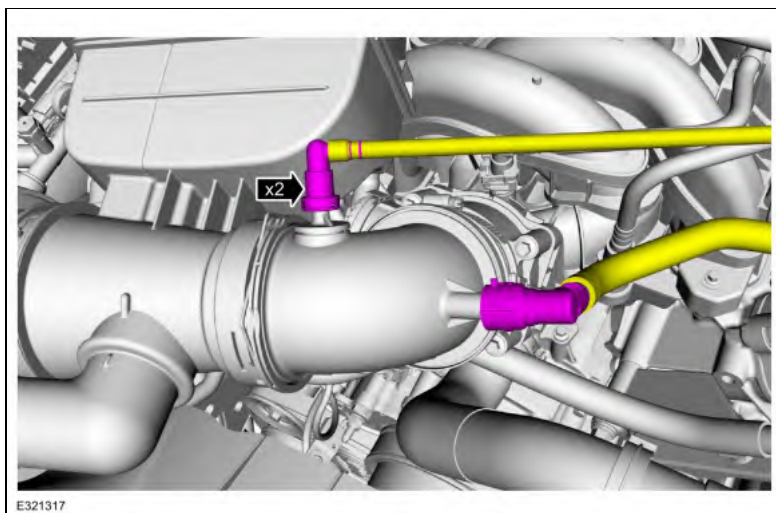

2. Remove the air cleaner outlet pipe.
 1. Loosen the clamps.
 2. Release the grommet and remove the air cleaner outlet pipe.

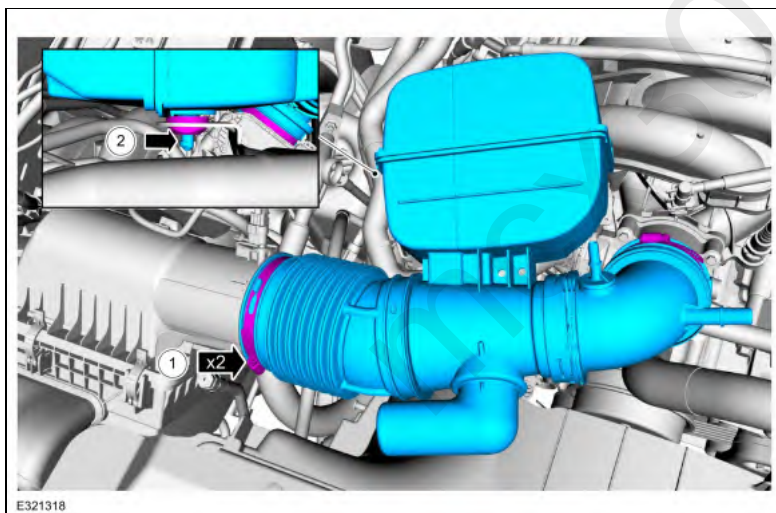

Installation

1. To install, reverse the removal procedure.

