

Evaporative Emission Canister Purge Valve


Removal

⚠ **WARNING:** Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures may be present and may be ignited. Failure to follow these instructions may result in serious personal injury.

⚠ **WARNING:** Do not carry personal electronic devices such as cell phones, pagers or audio equipment of any type when working on or near any fuel-related component. Highly flammable mixtures may be present and may be ignited. Failure to follow these instructions may result in serious personal injury.

NOTE: Removal steps in this procedure may contain installation details.

1. Disconnect the EVAP canister purge valve electrical connector.
2. Disconnect the EVAP canister purge valve quick connect coupling.
Refer to: Quick Release Coupling (310-00 Fuel System - General Information - 6.2L V8) .
3. Remove the bolts and the EVAP canister purge valve.
Torque: 62 lb.in (7 Nm)

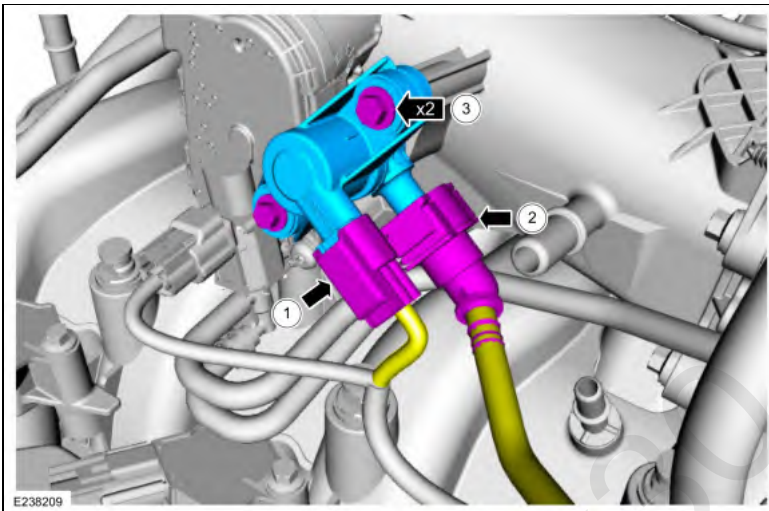

Installation

1. To install, reverse the removal procedure.