

Fuel Vapor Vent Valve - Crew Cab

Removal

⚠ **WARNING:** Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures may be present and may be ignited. Failure to follow these instructions may result in serious personal injury.

⚠ **WARNING:** Do not carry personal electronic devices such as cell phones, pagers or audio equipment of any type when working on or near any fuel-related component. Highly flammable mixtures may be present and may be ignited. Failure to follow these instructions may result in serious personal injury.

⚠ **WARNING:** Always disconnect the battery ground cable at the battery when working on an EVAP system or fuel-related component. Highly flammable mixtures may be present and may be ignited. Failure to follow these instructions may result in serious personal injury.


NOTE: Removal steps in this procedure may contain installation details.

All vehicles

1. Remove the fuel tank.
Refer to: Fuel Tank - Vehicles With: Midship Fuel Tank (310-01A Fuel Tank and Lines - 6.2L V8, Removal and Installation).


Type 1

2.
 1. Disconnect the EVAP quick connect coupling.
Refer to: Quick Release Coupling (310-00A) .
 2. Release the hose routing clips and remove the fuel vapour vent valve.

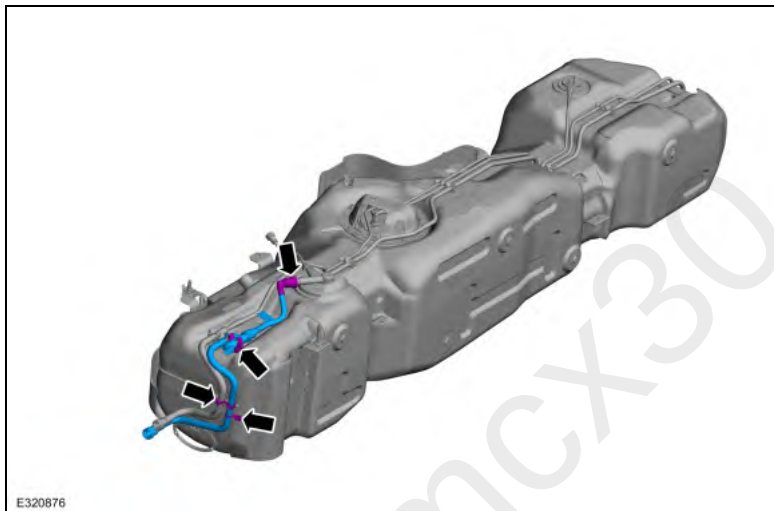

Type 2

3.
 1. Disconnect the EVAP quick connect coupling.
Refer to: Quick Release Coupling (310-00A) .
 2. Release the hose routing clips and remove the fuel vapour vent valve.

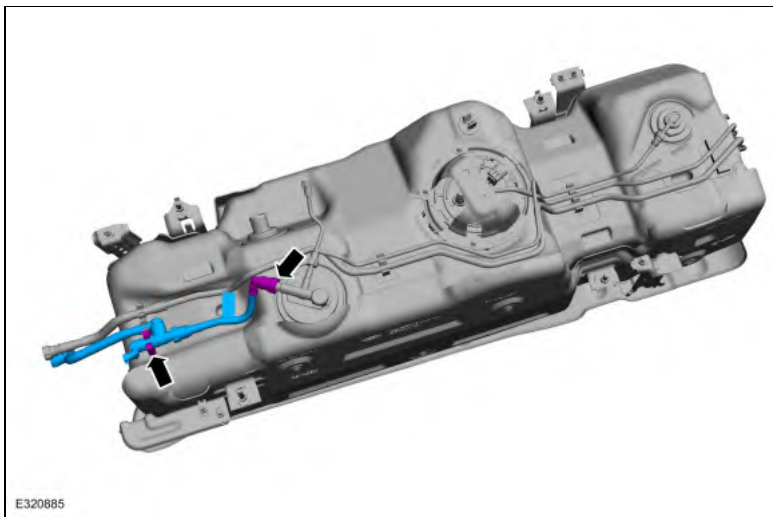

E320885



Installation

1. To install, reverse the removal procedure.

mcx30.com