

Evaporative Emission Canister Purge Valve


Removal

⚠ **WARNING:** Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures may be present and may be ignited. Failure to follow these instructions may result in serious personal injury.



⚠ **WARNING:** Do not carry personal electronic devices such as cell phones, pagers or audio equipment of any type when working on or near any fuel-related component. Highly flammable mixtures may be present and may be ignited. Failure to follow these instructions may result in serious personal injury.

NOTE: Removal steps in this procedure may contain installation details.

1. Disconnect quick release coupling.
Refer to: Quick Release Coupling (310-00D) .

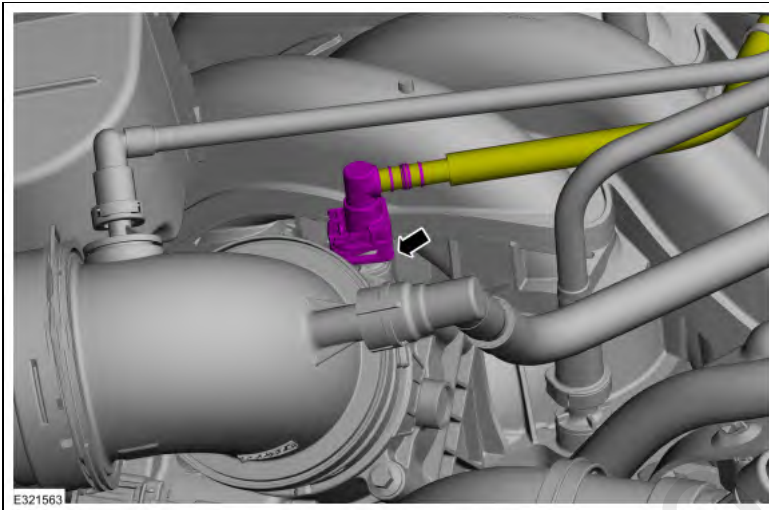

2.
 - Detach the retainer.
 - Disconnect the electrical connector.
 - Disconnect quick release coupling and remove the EVAP purge valve.
Refer to: Quick Release Coupling (310-00D) .

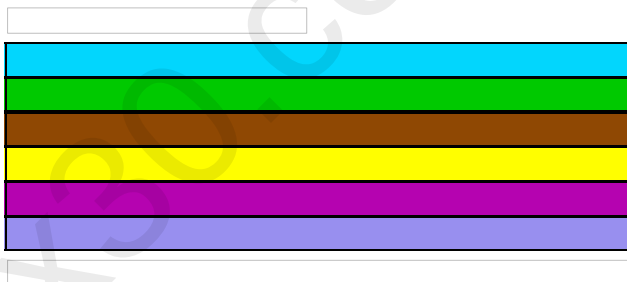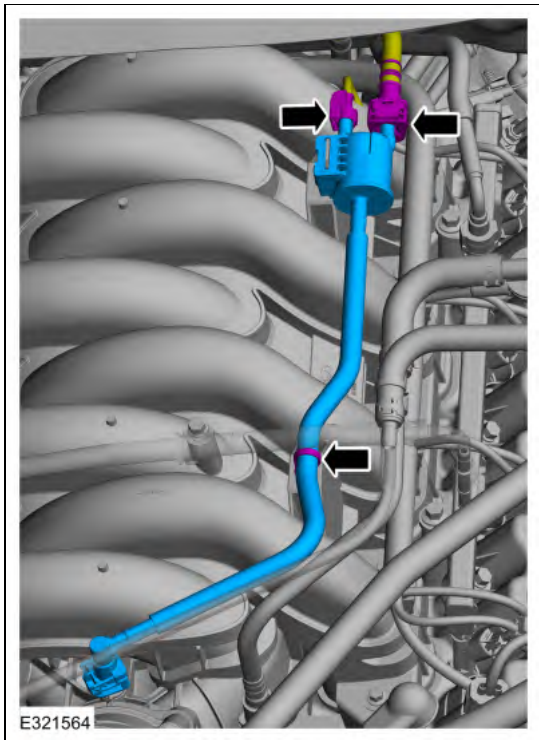

Installation

1. To install, reverse the removal procedure.
-