


Crankshaft Position (CKP) Sensor

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the intake manifold.
Refer to: Intake Manifold (303-01A Engine - 6.2L V8, Removal and Installation).
2. Disconnect the CKP sensor electrical connector, and remove the CKP sensor.

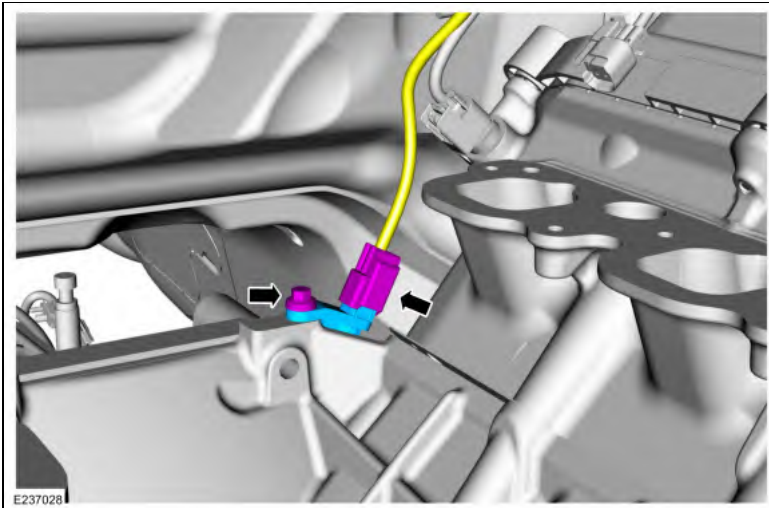

Installation

1. To install, reverse the removal procedure.
2. Using the scan tool, perform the Misfire Monitor Neutral Profile Correction procedure, following the on-screen instructions.