

Cylinder Head Temperature (CHT) Sensor


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the intake manifold.
Refer to: Intake Manifold (303-01A Engine - 6.2L V8, Removal and Installation).

2. **NOTE:** Do not reuse the CHT sensor, install a new sensor.

Disconnect the CHT sensor, remove and discard the CHT sensor.
Torque: 97 lb.in (11 Nm)

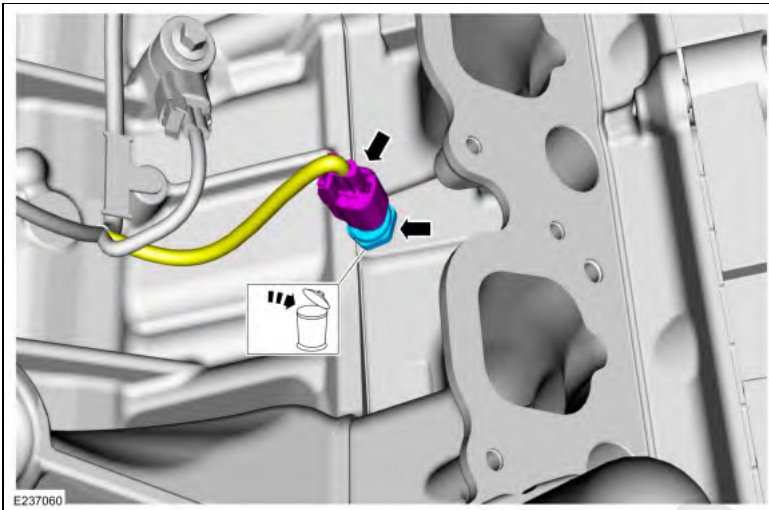

Installation

1. To install, reverse the removal procedure.