


Intake Manifold Runner Control (IMRC) Actuator

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the IMRC position sensors.
Refer to: Intake Manifold Runner Control (IMRC) Position Sensor (303-14A Electronic Engine Controls - 6.2L V8, Removal and Installation).
2. Remove the hoses, retainers and the IMRC actuators.
Torque: 53 lb.in (6 Nm)

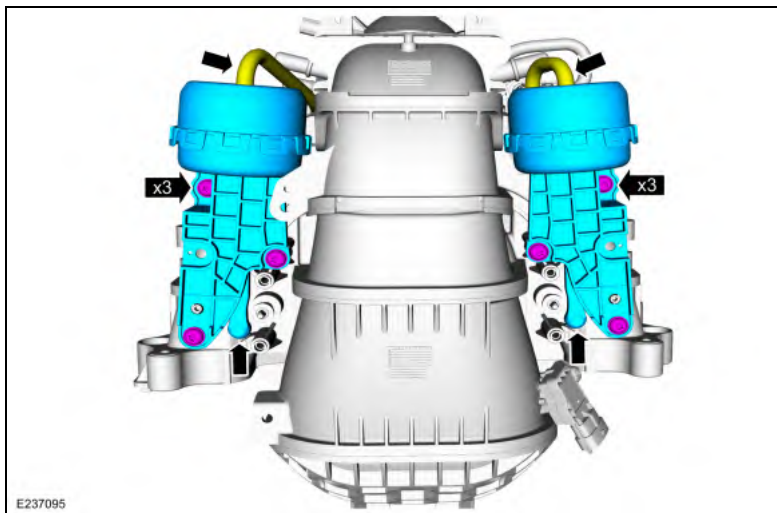

Installation

1. To install, reverse the removal procedure.