


Intake Manifold Runner Control (IMRC) Position Sensor

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the intake manifold.
Refer to: Intake Manifold (303-01A Engine - 6.2L V8, Removal and Installation).
2.
 - Remove the retainers and the LH IMRC position sensor.
Torque: 53 lb.in (6 Nm)
 - Remove the retainers and the RH IMRC position sensor.
Torque: 53 lb.in (6 Nm)

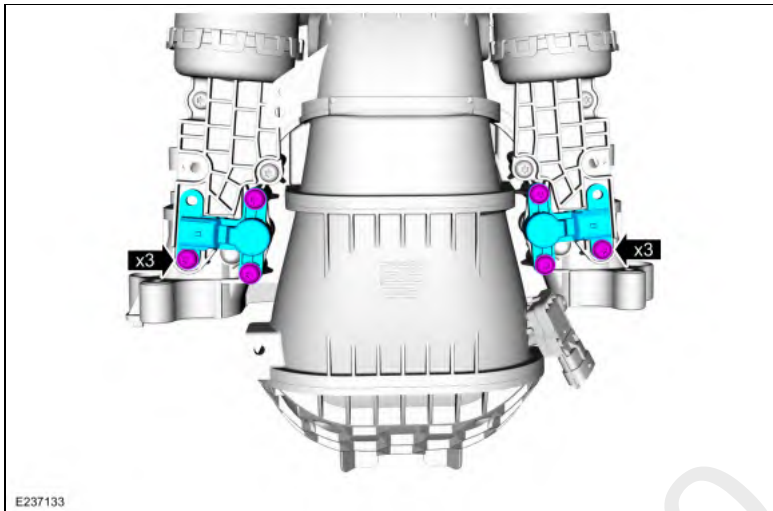

Installation

1. To install, reverse the removal procedure.