


Variable Camshaft Timing (VCT) Oil Control Solenoid

Removal

NOTE: Removal steps in this procedure may contain installation details.


RH (right-hand) Variable Camshaft Timing (VCT) Oil Control Solenoids

1. Remove the RH valve cover.
Refer to: Valve Cover RH (303-01A Engine - 6.2L V8, Removal and Installation).
2. Remove the bolts and the RH VCT oil control solenoid.
Torque:
Stage 1: 71 lb.in (8 Nm)
Stage 2: 30Å°

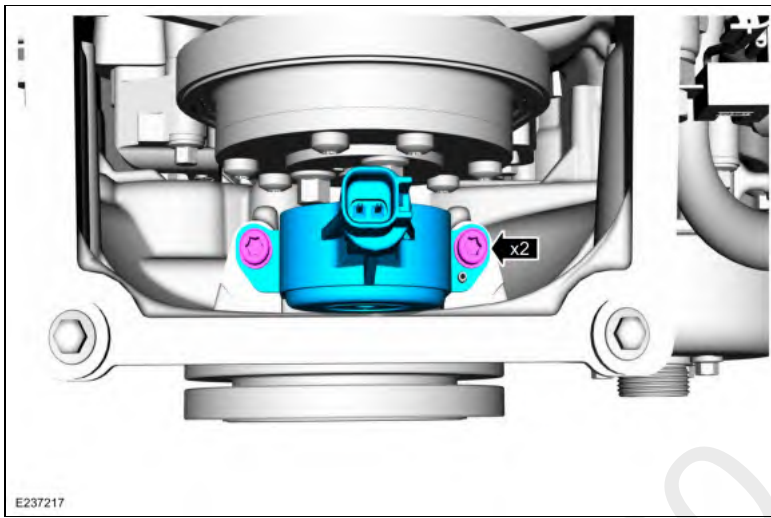

LH (left-hand) Variable Camshaft Timing (VCT) Oil Control Solenoids

3. Remove the LH valve cover.
Refer to: Valve Cover LH (303-01A Engine - 6.2L V8, Removal and Installation).
4. Remove the bolts and the LH VCT oil control solenoid.
Torque:
Stage 1: 71 lb.in (8 Nm)
Stage 2: 30Å°

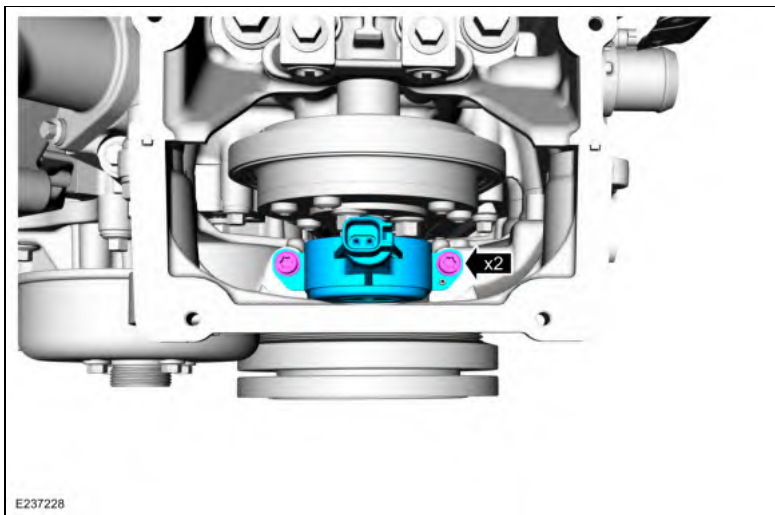

Installation

1. To install, reverse the removal procedure.