



Electronic Engine Controls - Component Location

Electronic Engine Controls - Top

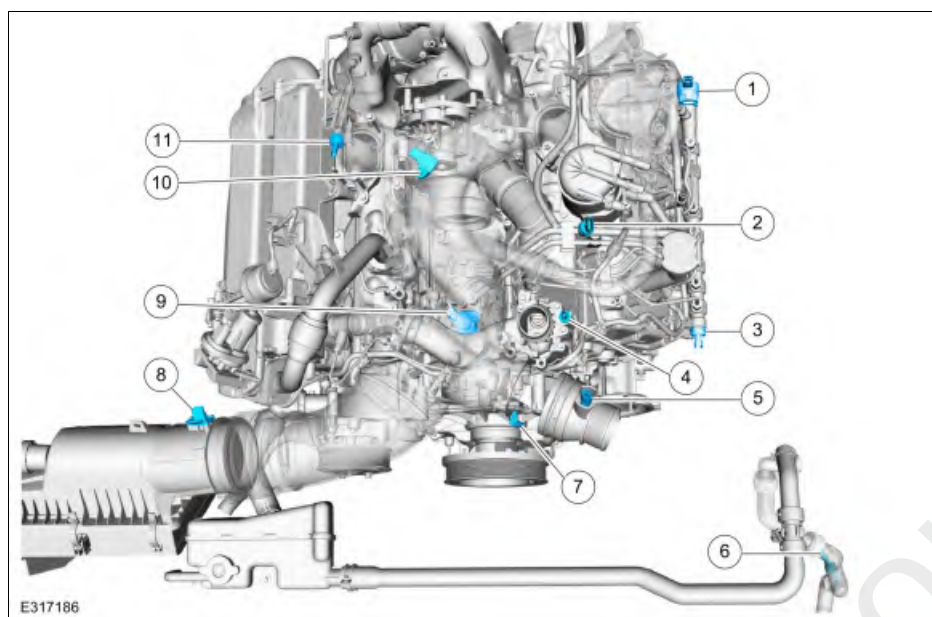


Item	Description
1	Fuel Pressure Control Valve
2	Fuel Pressure and Temperature sensor
3	FRP sensor
4	ECT sensor
5	Charge Air Cooler Temperature sensor
6	ECT Secondary Cooling system (ECT2) sensor
7	CMP sensor
8	MAF sensor
9	Fuel Volume Control Valve
10	MAP sensor
11	Exhaust Pressure (EP) sensor

Electronic Engine - Rear

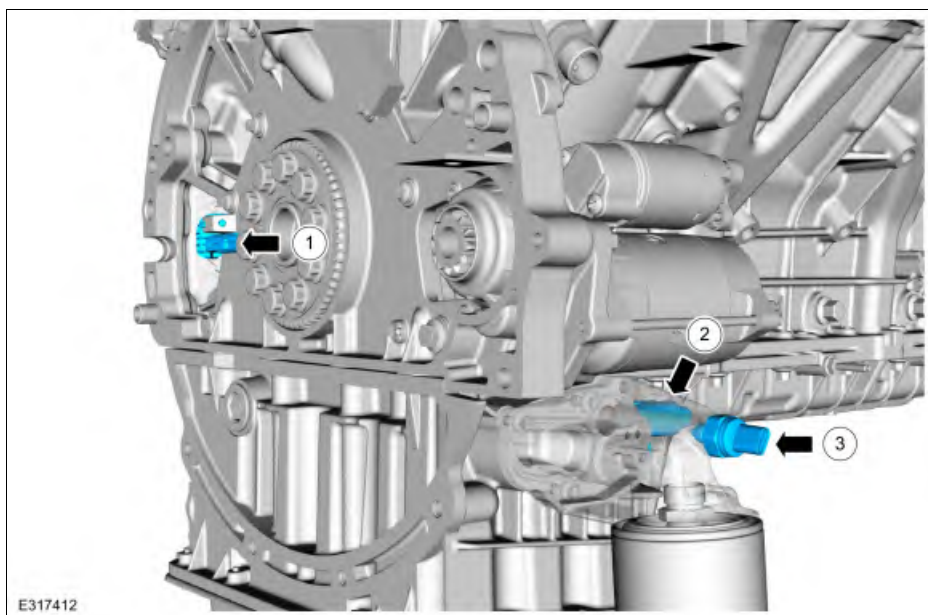

Item	Description
1	CKP sensor
2	Oil Pressure Control Solenoid
3	Engine Oil Pressure and Temperature sensor


Electronic Engine Controls - Exhaust System

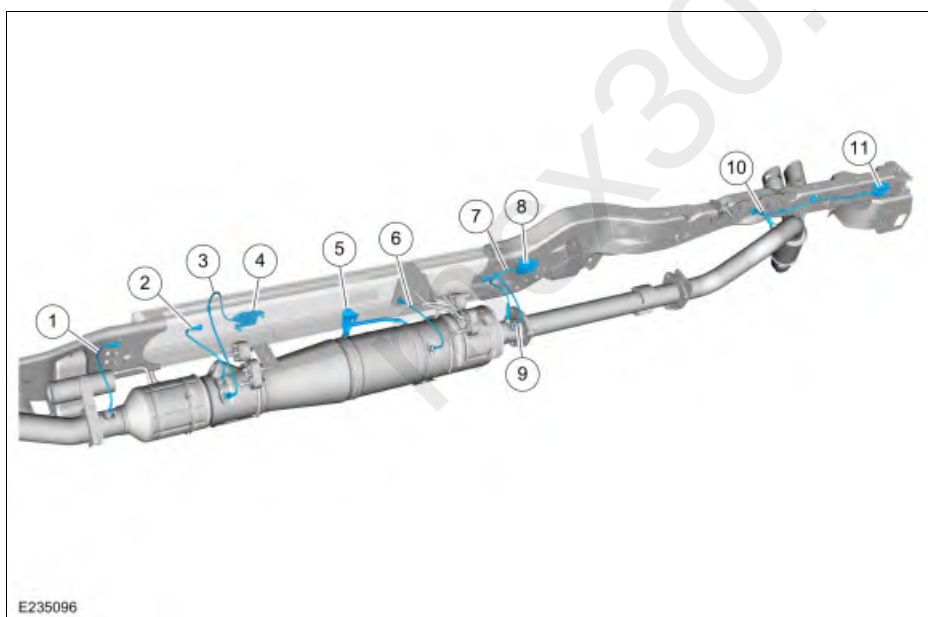

Item	Description
1	Exhaust Gas Temperature sensor 11
2	Exhaust Gas Temperature sensor 12
3	NOX11 sensor 11
4	NOX11 module 11
5	DPF Pressure sensor
6	Exhaust Gas Temperature sensor 13
7	NOX12 sensor 12
8	NOX12 module 12


9	Exhaust Gas Temperature sensor 14
10	Patriculate Matter sensor 11
11	Particulate Matter sensor Module 11

Electronic Engine Controls - Exhaust System - Chassis Cab

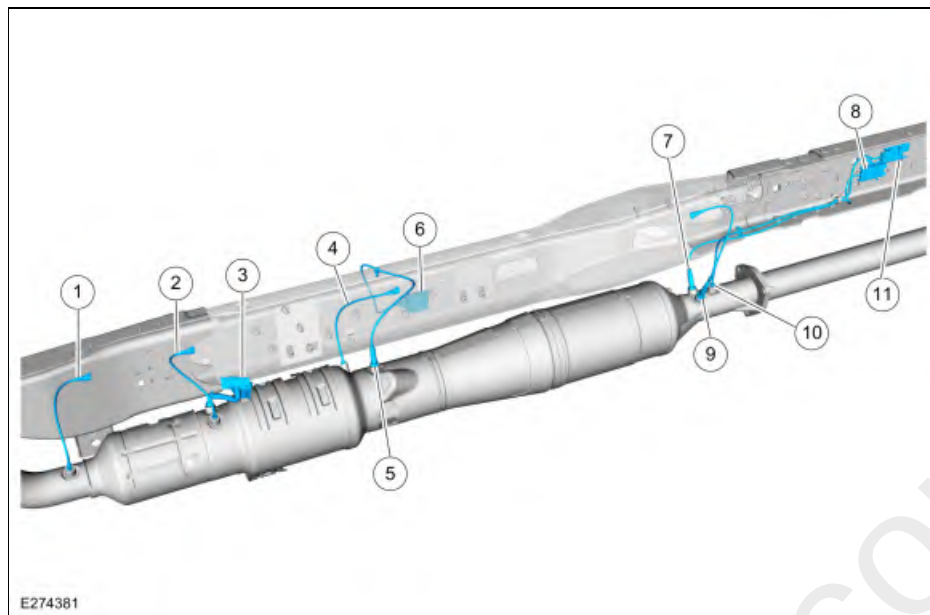

Item	Description
1	Exhaust Gas Temperature sensor 11
2	Exhaust Gas Temperature sensor 12
3	DPF Pressure sensor
4	Exhaust Gas Temperature sensor 13
5	NOX11 sensor 11
6	NOX11 module 11
7	NOX12 sensor 12
8	NOX12 module 12
9	Patriculate Matter sensor 11
10	Exhaust Gas Temperature sensor 14
11	Particulate Matter sensor Module 11

Powertrain Control Module (PCM)

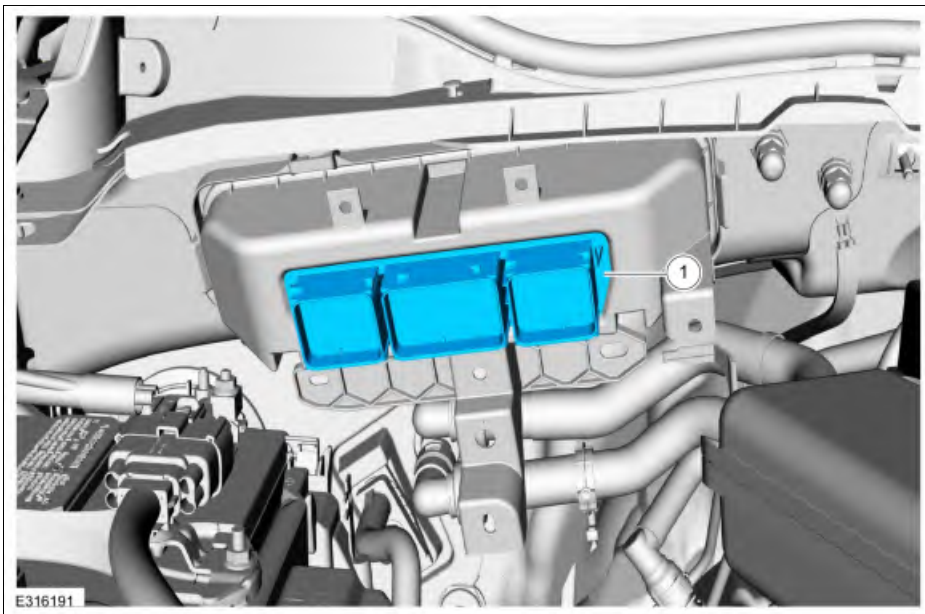

Item	Description
1	PCM