


Charge Air Cooler Temperature Sensor


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Disconnect the charge air cooler temperature sensor electrical connector.

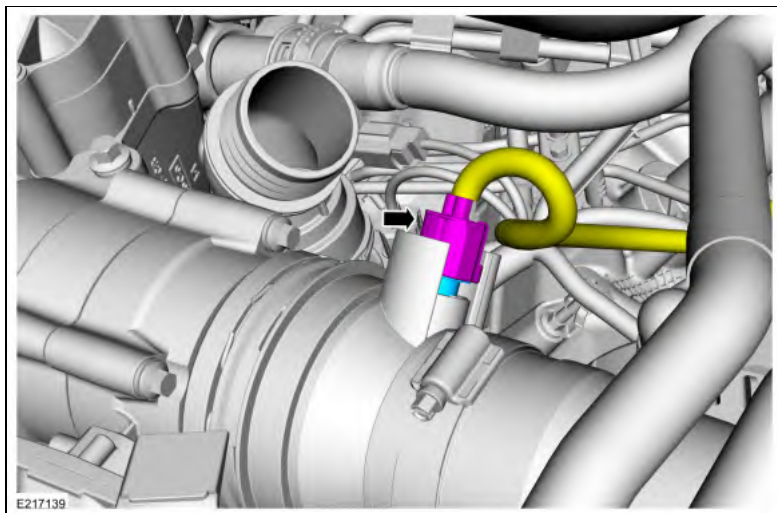

2. Remove the charge air cooler temperature sensor.

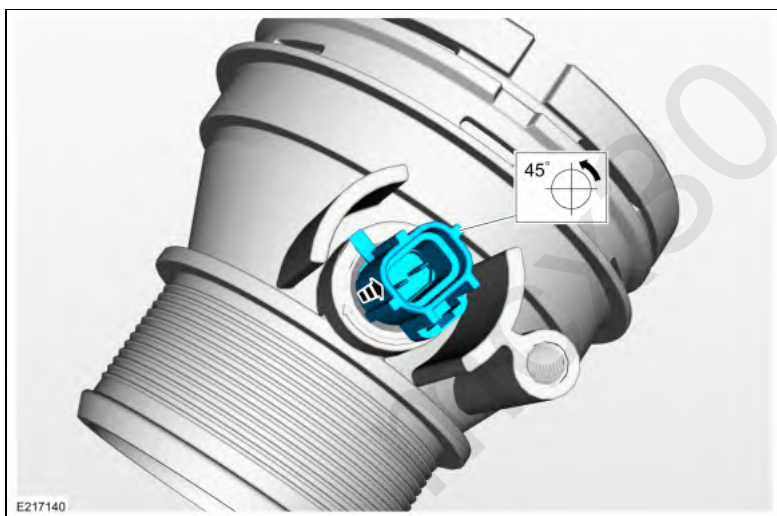

Installation

1. To install, reverse the removal procedure.