


Engine Oil Pressure (EOP) Sensor

Materials


Name	Specification
Motorcraft® Thread Sealant with PTFE TA-24-B	WSK-M2G350-A2

Removal

1. Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Disconnect the engine oil pressure and temperature sensor electrical connector.

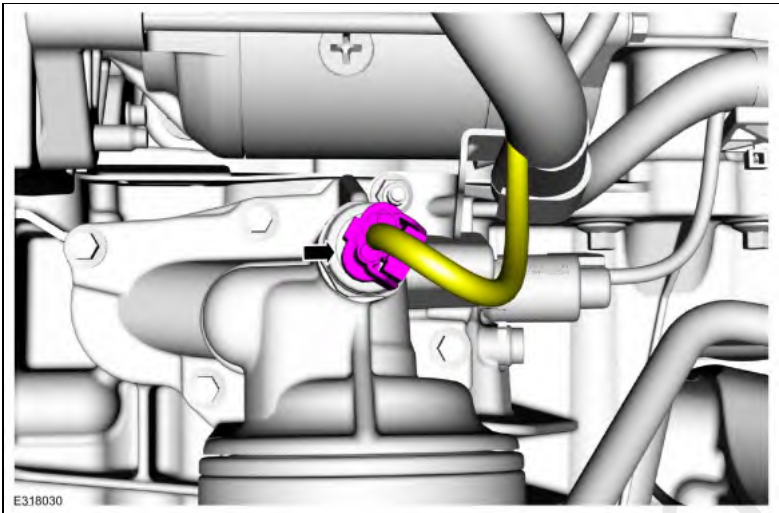

3. Remove the engine oil pressure and temperature sensor.
Torque: 89 lb.in (10 Nm)

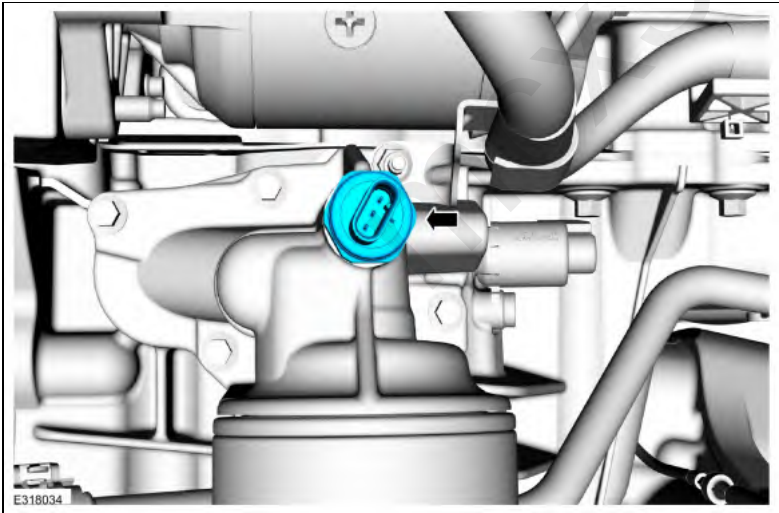

Installation

1. **NOTE:** If the engine oil pressure and temperature sensor is to be reused, apply thread sealant.
To install, reverse the removal procedure.
Material: Motorcraft® Thread Sealant with PTFE / TA-24-B (WSK-M2G350-A2)

