


Exhaust Pressure Sensor

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Disconnect the electrical connector and harness clip. Remove the exhaust pressure sensor.
Torque: 177 lb.in (20 Nm)

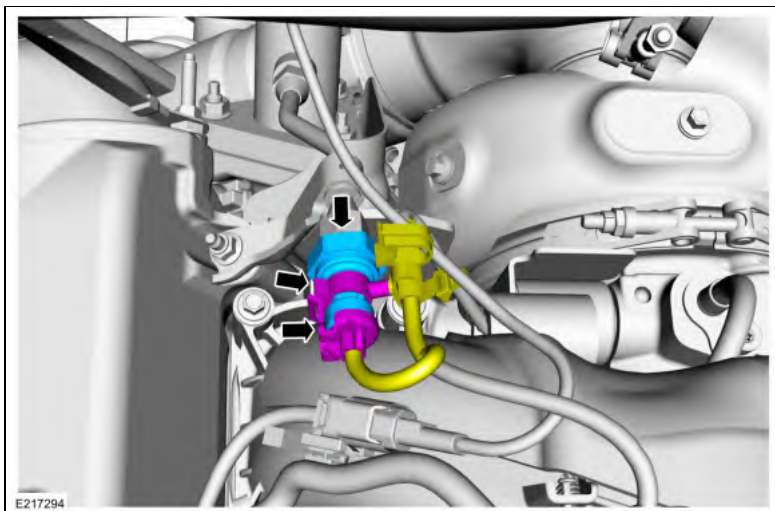

Installation

1. To install, reverse the removal procedure.