


Manifold Absolute Pressure (MAP) Sensor


Removal

NOTE: Removal steps in this procedure may contain installation details

1. Remove the bolts and the MAP sensor shield.
Torque: 97 lb.in (11 Nm)

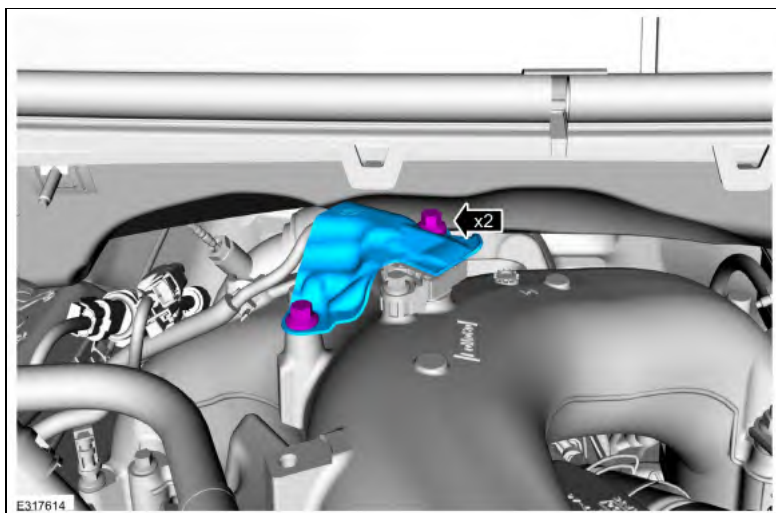

2. Disconnect the MAP sensor electrical connector. Remove the bolt and the MAP sensor.
Torque: 62 lb.in (7 Nm)

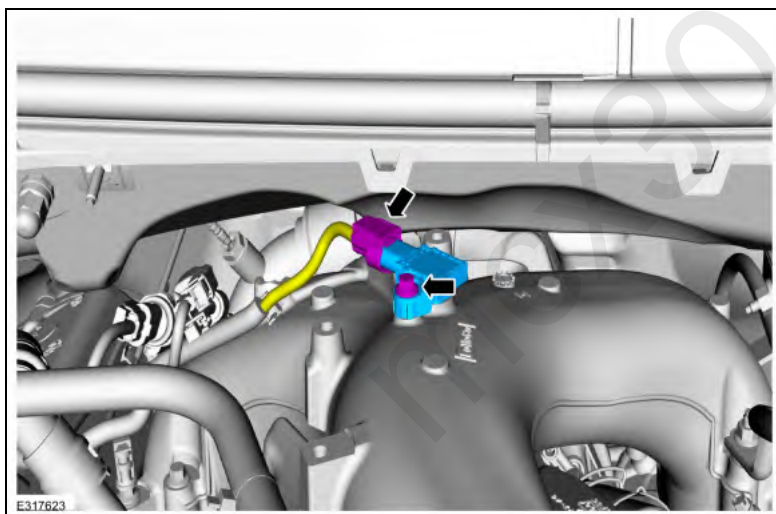

Installation

NOTE: Reset/clear the specified function for the manifold absolute pressure sensor. Clear the continuous PCMDTCs. Refer to Section 2 of the PC/ED Manual.

1. To install, reverse the removal procedure.

