


Mass Air Flow (MAF) Sensor

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Disconnect the MAF electrical connector. Remove the 2 screws and the MAF sensor.
Torque: 53 lb.in (6 Nm)

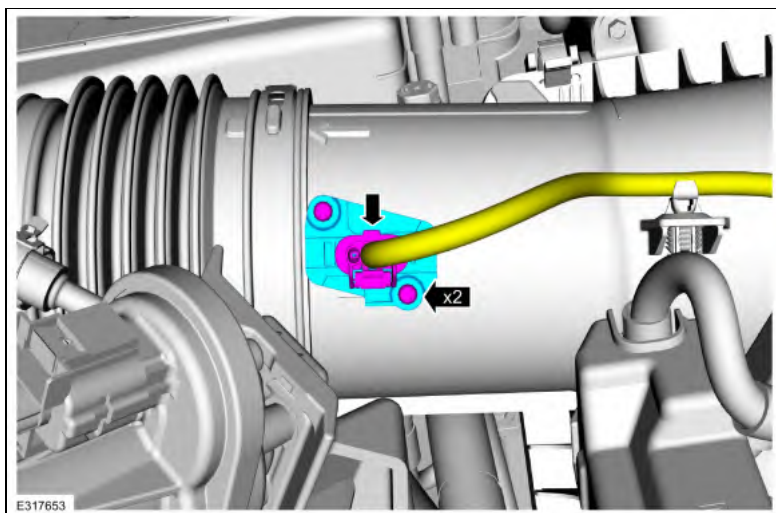

Installation

NOTE: Reset/clear the specified function for the mass air flow sensor. Clear the continuous PCMDTCs. Refer to Section 2 of the PC/ED Manual.

1. To install, reverse the removal procedure.