

Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).

2.  **NOTICE:** Make sure that the ball joint ball does not rotate.

Torque: 115 Nm

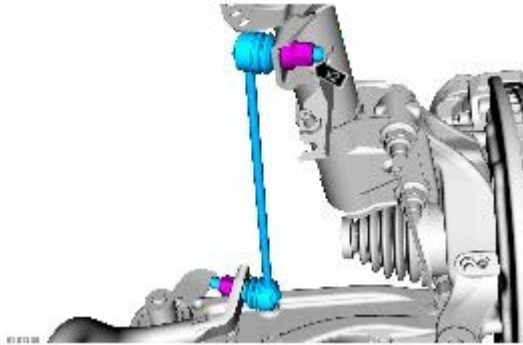

Installation

1. To install, reverse the removal procedure.