

Removal and Installation

General Equipment

Ford approved diagnostic tool


Transmission Jack

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).

2. Torque: 20 Nm

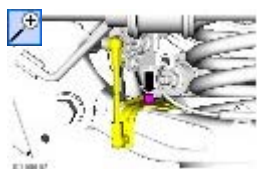


3.

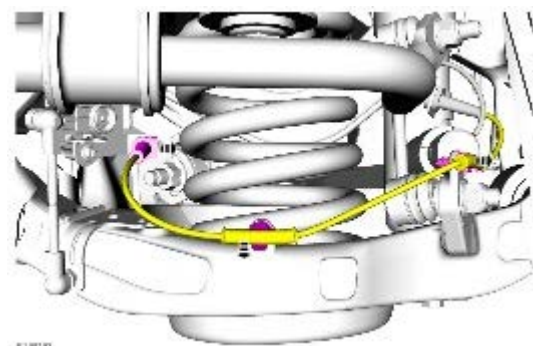

4.




5. Use the General Equipment: [Transmission Jack](#)

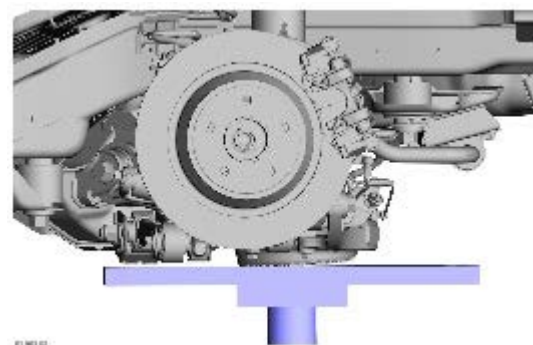

6. Torque: 48 Nm



7. Torque: 90 Nm

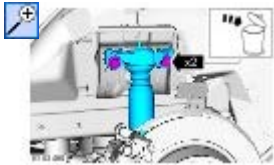


8. NOTE: This step is only necessary when installing a new component.



9. NOTE: This step is only necessary when installing a new component.

1. 1.  NOTICE: Make sure that the component does not rotate.

Torque: 30 Nm

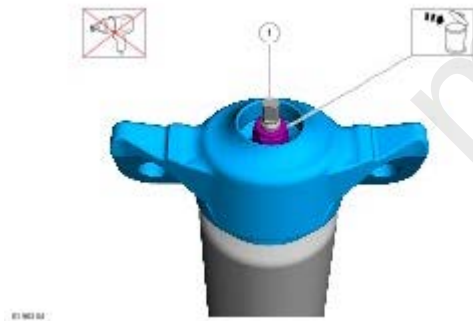

Installation

1. To install, reverse the removal procedure.
2. Calibrate the suspension height sensor using the diagnostic tool.

Use the General Equipment: [Ford approved diagnostic tool](#)