


Removal and Installation


Removal

1. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).

2.

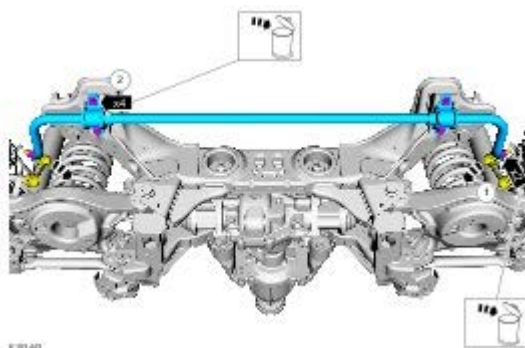

3.  **NOTICE:** Do not use any lubrication on the stabilizer bar or the bushings or damage to the bushings may occur.
NOTE: Stabilizer bar bushings must be installed with slits facing the front of the vehicle.

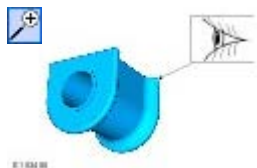

Installation

1. NOTE: Apply water to the brackets to aid in installation.



2.

1. Torque: 70 Nm

2. Torque: 103 Nm



3. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).

mcx30.com