


Removal and Installation

General Equipment


Vehicle/Axle Stands

Removal

1. Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
2. Use the General Equipment: [Vehicle/Axle Stands](#)

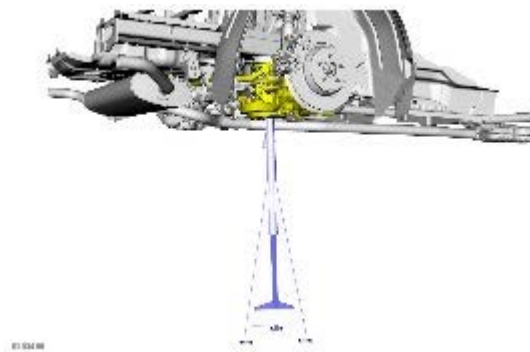

3.

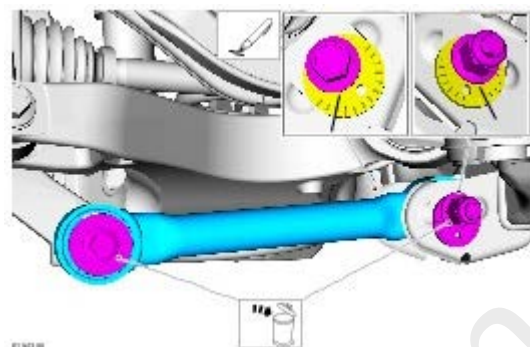


Installation

1.  **NOTICE:** Tighten the suspension bushing fasteners with the suspension loaded or with the weight of the vehicle resting on the wheels and tires, otherwise incorrect clamp load and bushing damage may occur.
NOTE: Align reference marks made during removal.

Torque:

- 1 103 Nm
- 2 175 Nm

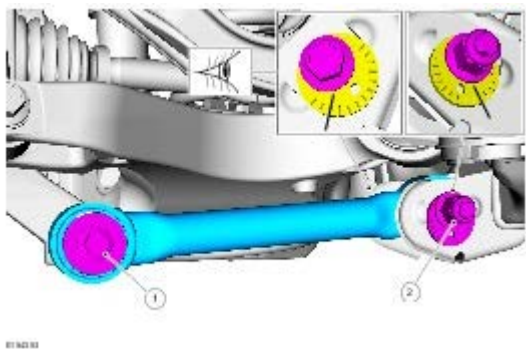

2. Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).

3. Refer to: [Rear Toe Adjustment](#) (204-00 Suspension System - General Information, General Procedures).