


Removal and Installation

General Equipment


Transmission Jack

Removal


1. Refer to: [Driveshaft](#) (205-01 Driveshaft, Removal and Installation).
2. 1. **NOTE:** Note the position of the components before removal.

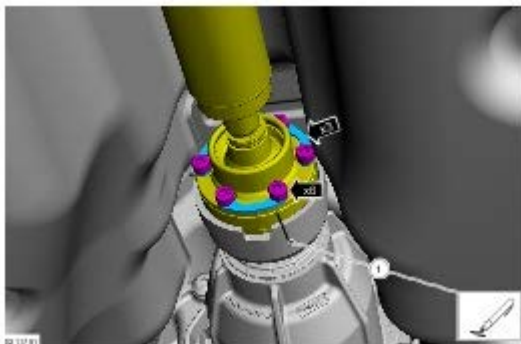


3.

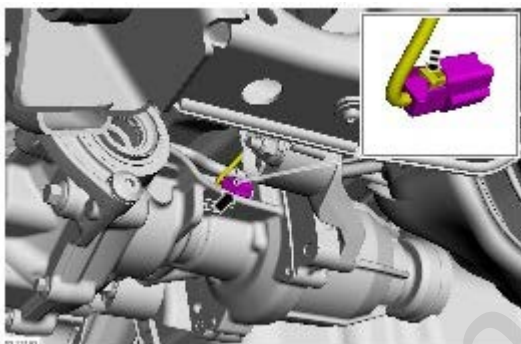


4.

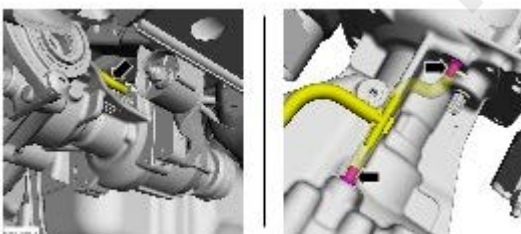


5. Use the General Equipment: [Transmission Jack](#)

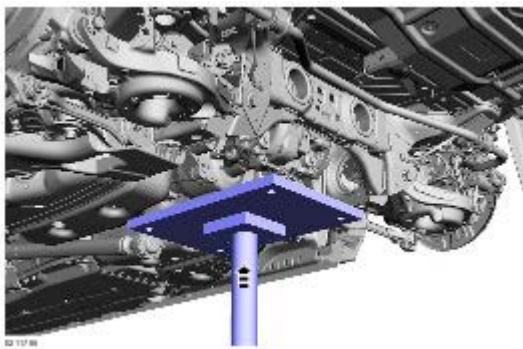

6. Use the General Equipment: [Transmission Jack](#)

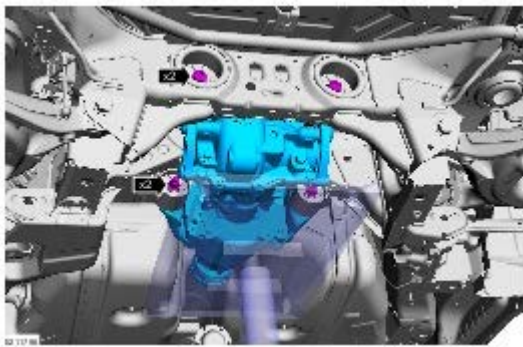


7. Use the General Equipment: [Transmission Jack](#)

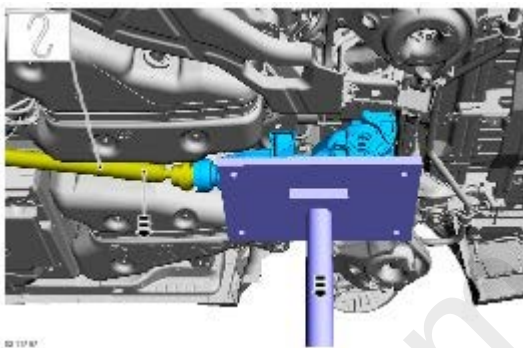


Installation

1. Use the General Equipment: [Transmission Jack](#)

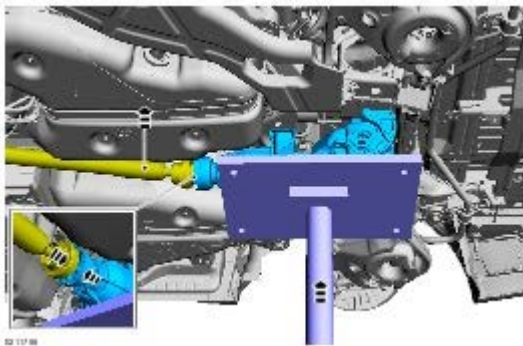


2. NOTE: Make sure that new bolts are installed.
NOTE: Make sure that new nuts are installed.


1. Use the General Equipment: [Transmission Jack](#)
Torque: 90 Nm
2. Remove the General Equipment: [Transmission Jack](#)

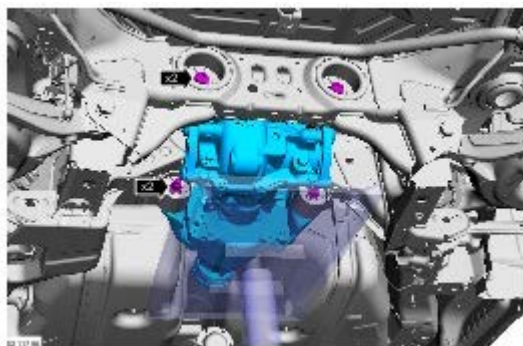

3.

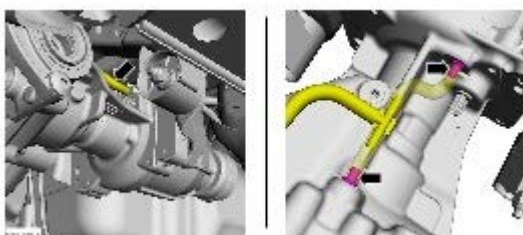


4.

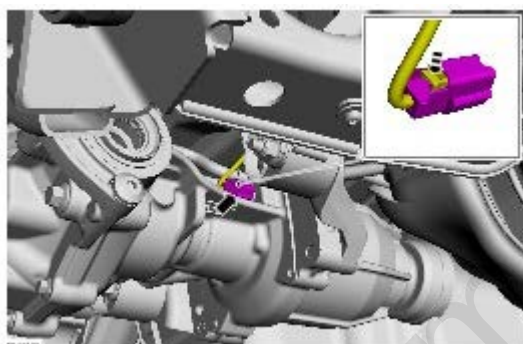

5. NOTE: Make sure that new bolts are installed.
NOTE: Make sure that the component is installed to the position noted before removal.

Torque: 35 Nm

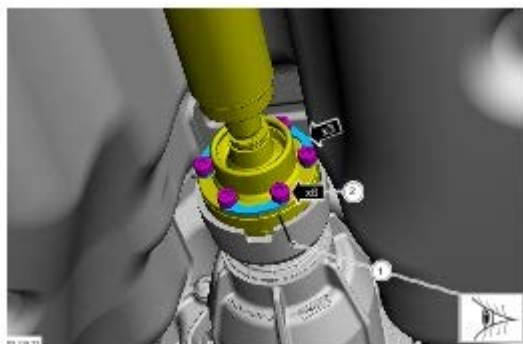

6. Refer to: [Driveshaft](#) (205-01 Driveshaft, Removal and Installation).

mcx30.com