


Description and Operation

Overview of front drive halfshafts

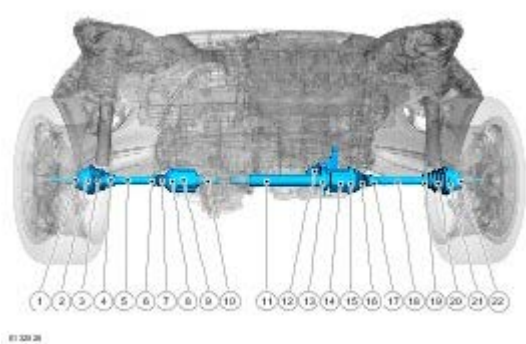

Item Description

- 1 Outer CV joint housing **without** length compensation, left side
- 2 Boot tightening strap – outer boot
- 3 Outer CV joint boot, left side
- 4 Boot tightening strap – outer boot
- 5 Front drive halfshaft, left side
- 6 Boot tightening strap – inner boot
- 7 Inner CV joint boot, left side
- 8 Boot tightening strap – inner boot
- 9 Inner CV joint housing **with** length compensation, left side
- 10 Front drive halfshaft stub
- 11 Intermediate shaft
- 12 Intermediate shaft bracket
- 13 Intermediate shaft center bearing
- 14 Inner CV joint housing **with** length compensation, right side
- 15 Boot tightening strap – inner boot
- 16 Inner CV joint boot, right side
- 17 Boot tightening strap – inner boot
- 18 Front drive halfshaft, right side
- 19 Boot tightening strap – outer boot
- 20 Outer CV joint boot, right side
- 21 Boot tightening strap – outer boot
- 22 Outer CV joint housing **without** length compensation, right side