


Removal and Installation

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).

2. Torque: 25 Nm

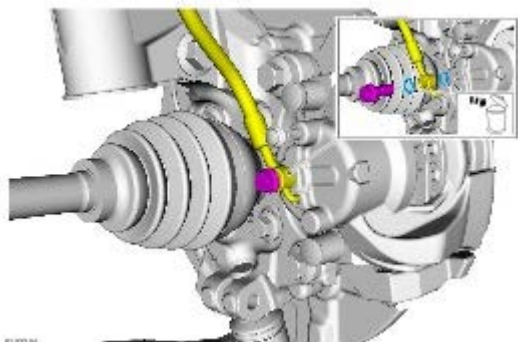

- 3.



4. Torque: 30 Nm



- 5.



Installation

1.  **NOTICE:** Make sure that the brake hose is not twisted and is correctly located.
To install, reverse the removal procedure.

2. Refer to: [Component Bleeding](#) (206-00 Brake System - General Information, General Procedures).