


Removal and Installation

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Brake Disc](#) (206-04 Rear Disc Brake, Removal and Installation).

2. Torque: 12 Nm

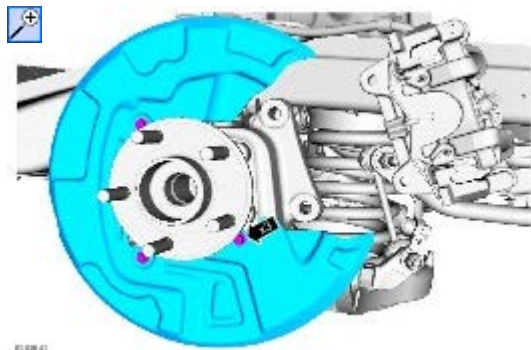

Installation

1. To install, reverse the removal procedure.