

Removal and Installation

General Equipment

Brake Caliper Piston Retractor

Materials

Name	Specification
Brake Fluid	WSS-M6C65-A2

Removal


NOTE: Removal steps in this procedure may contain installation details.

1.  **WARNING:** Service actions on vehicles equipped with electronic parking brakes may cause unexpected parking brake application, which could result in injury to hands or fingers. Put the electronic parking brake system into service mode prior to servicing or removing rear brake components. Failure to follow this instruction may result in serious personal injury.

Refer to: Electronic Parking Brake (EPB) Service Mode Activation and Deactivation (206-05 Parking Brake and Actuation, General Procedures).

2. Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).

3.

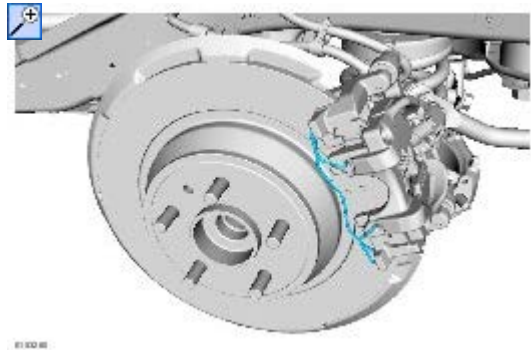


4. **NOTICE:**

 Align the center pin of the inboard brake pad with the brake caliper piston pocket or damage to the brake pad or caliper piston may occur. If necessary, only rotate the piston counter clockwise to align with the pin.

 Make sure that no load is placed on the brake hose.

 Make sure that the brake hose is not twisted and is correctly located.


Torque: 28 Nm

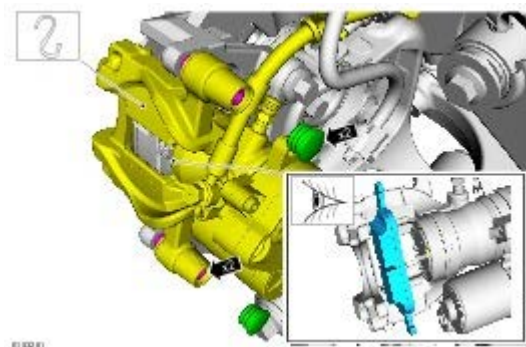

5.



6. Use the General Equipment: [Brake Caliper Piston Retractor](#)

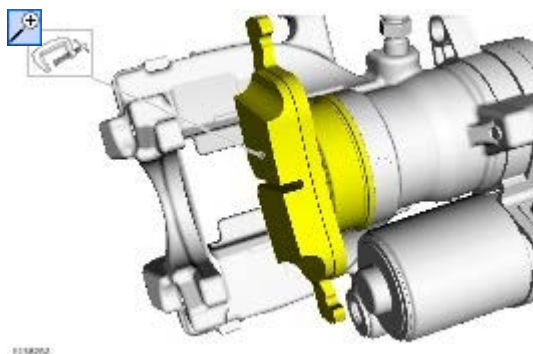

Installation

1. To install, reverse the removal procedure.

2. If equipped.



3. Refer to: [Electronic Parking Brake \(EPB\) Service Mode Activation and Deactivation \(206-05 Parking Brake and Actuation, General Procedures\)](#).

4. Depress the brake pedal, check the brake fluid level in the brake fluid reservoir and top up as necessary with brake fluid.

Material: [WSS-M6C65-A2 \(Brake Fluid\)](#)