


Removal and Installation

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Steering Column](#) (211-04 Steering Column, Removal and Installation).
2. Refer to: [Instrument Panel Cluster \(IPC\)](#) (413-01 Instrumentation, Message Center and Warning Chimes, Removal and Installation).
3. Refer to: [Stoptlamp Switch](#) (417-01 Exterior Lighting, Removal and Installation).
4. Refer to: [Accelerator Pedal](#) (310-02 Acceleration Control, Removal and Installation).

5.

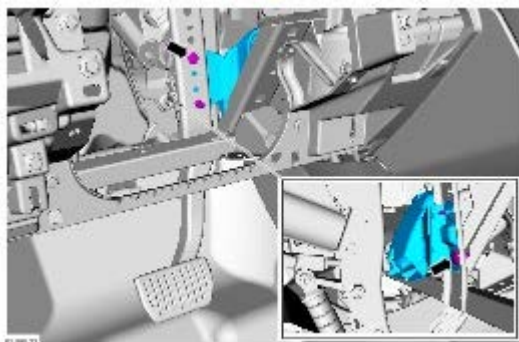


6.

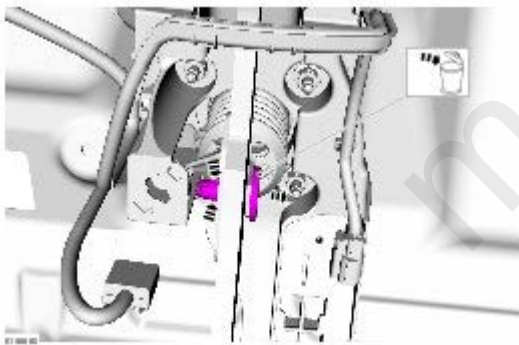


7.



8.

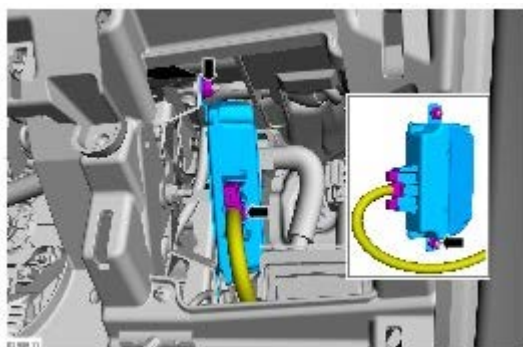

9. Torque: 23 Nm

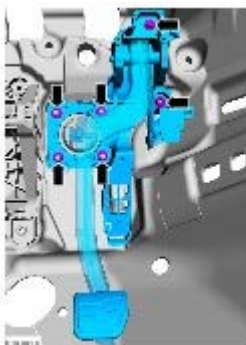

Installation

1. To install, reverse the removal procedure.