

Removal and Installation

General Equipment

Tie Rod End Remover

Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).

2.  **NOTICE:** Make sure that the ball joint ball does not rotate.


1. Make sure that the tie rod thread is clean and free of foreign material.

Torque: 103 Nm


2. *Torque:* 150 Nm

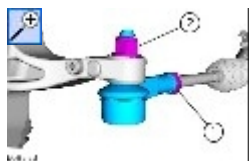

3. Use the General Equipment: [Tie Rod End Remover](#)

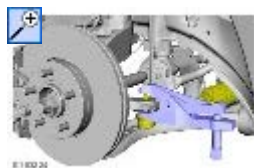

4. **NOTE:** Make sure that the tie rod end is installed with the same number of turns as when removed.

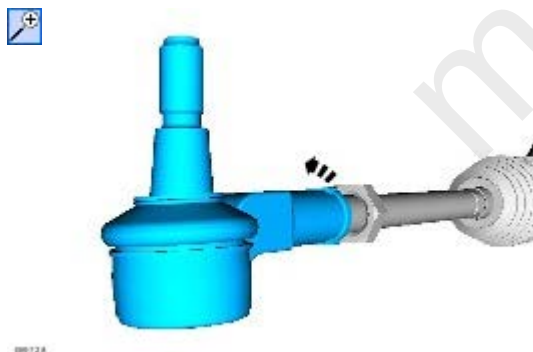

Installation

1. To install, reverse the removal procedure.
2. Refer to: [Front Toe Adjustment](#) (204-00, General Procedures).