

Removal and Installation

Removal

 **NOTICE:** To prevent damage to the clockspring, make sure the front wheels are in the straight-ahead position.

NOTE: Removal steps in this procedure may contain installation details.

-  **WARNING:** Before beginning any service procedure in this section, refer to Safety Warnings in section 100-00 General Information. Failure to follow this instruction may result in serious personal injury.


Refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

- Refer to: [Driver Airbag](#) (501-20B Supplemental Restraint System, Removal and Installation).

- Torque: 48 Nm



- NOTE:** Make sure the clockspring rotor does not rotate.
NOTE: Make sure the clockspring pins are not bent or damaged.

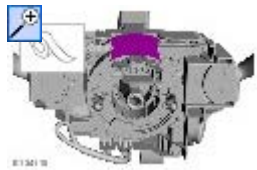

Installation

- To install, reverse the removal procedure.