

Removal and Installation

General Equipment

Hose Clamp Remover/Installer

Materials


Name	Specification
Flange Sealant	WSS-M2G348-A11

Removal


1. Remove the following items:
1. Refer to: [Fuel Rail](#) (303-04B Fuel Charging and Controls, Removal and Installation).

2. Refer to: [Variable Camshaft Timing \(VCT\) Oil Control Solenoid](#) (303-14B Electronic Engine Controls, Removal and Installation).
2.

1. Use the General Equipment: [Hose Clamp Remover/Installer](#)

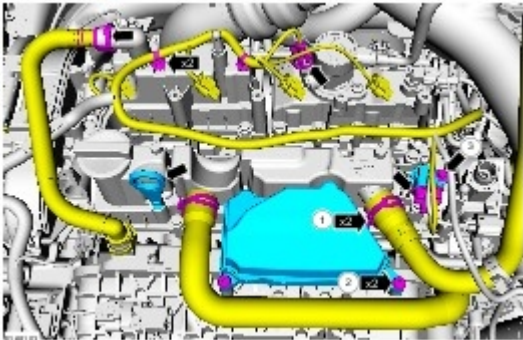


3.

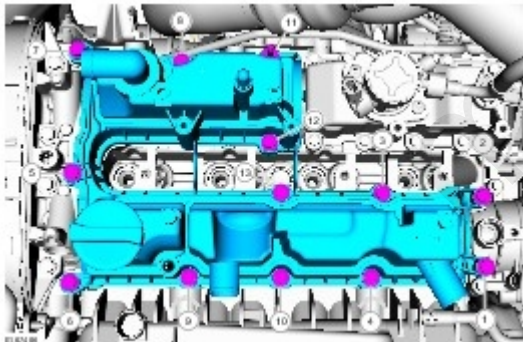


Installation

1. NOTE: Make sure that the mating faces are clean and free of foreign material.
NOTE: The component must be installed within 5 minutes of applying the sealant.
- Material: [WSS-M2G348-A11](#) (Flange Sealant)

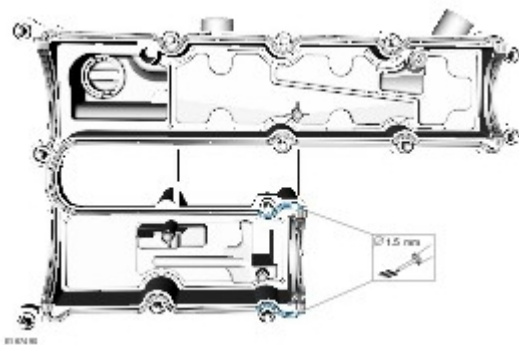


2. **NOTE:** Make sure that the mating faces are clean and free of foreign material.

Material: [WSS-M2G348-A11 \(Flange Sealant\)](#)

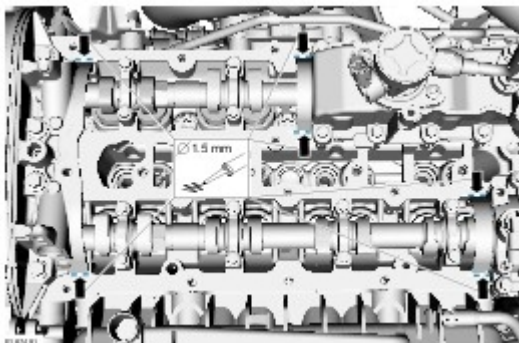

3. **Torque:**

Stage 1: 5 Nm
Stage 2: 9 Nm
Stage 3: 10 Nm

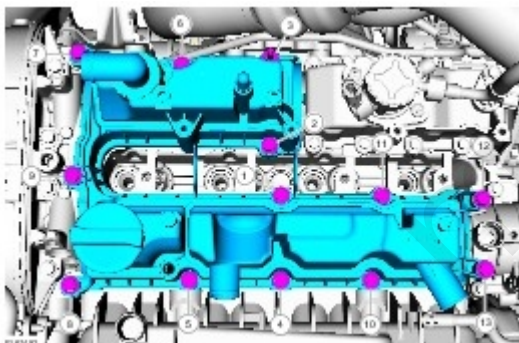

- 4.

1. Use the General Equipment: [Hose Clamp Remover/Installer](#)

2. Torque: 5 Nm

3. Torque: 9 Nm



5. Install the following items:

1. Refer to: [Fuel Rail](#) (303-04B Fuel Charging and Controls, Removal and Installation).
2. Refer to: [Variable Camshaft Timing \(VCT\) Oil Control Solenoid](#) (303-14B Electronic Engine Controls, Removal and Installation).

mcx30.com