

Disassembly


Special Tool(s)




1. **NOTE:** Note the position of the component before removal.




2.

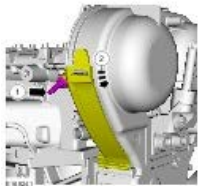

3.

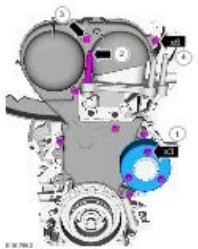


4. **NOTE:** Note the different lengths of the bolts.

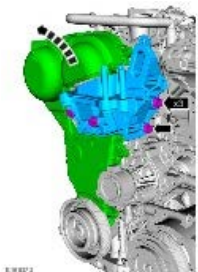

5.



6.

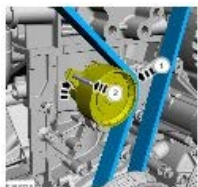

7.




8.




9.  **WARNING:** The tensioner is under spring tension. Be careful when handling the tensioner. Failure to follow this instruction may result in personal injury.




10.

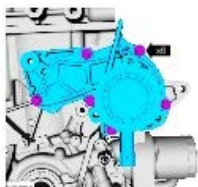

11.

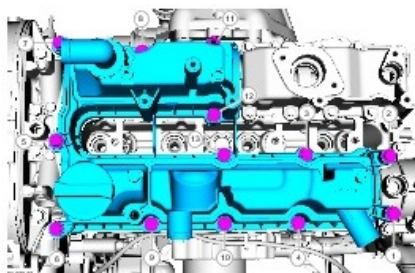

12.

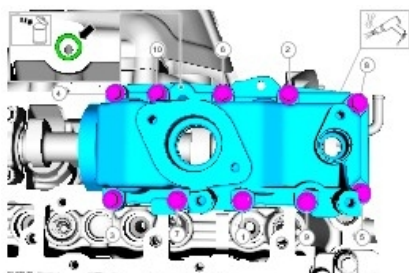


13.




14.  **NOTICE:** Use an open-ended wrench to prevent the component from turning.




15.  **NOTICE:** Use an open-ended wrench to prevent the component from turning.

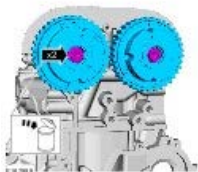


16. Use Special Service Tool: 303-293.

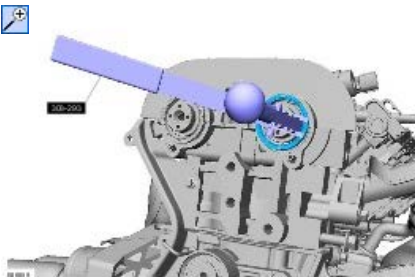


- 17.

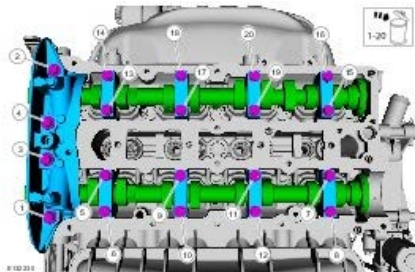

- 18.

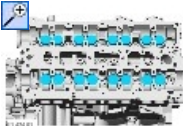


- 19.

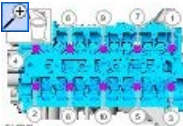


20. **NOTE:** Be prepared to collect escaping fluid.



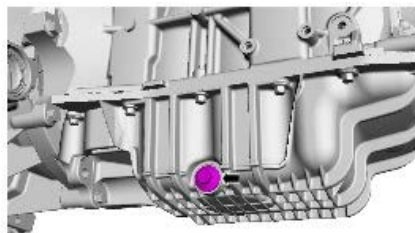


817 0000 01

21.

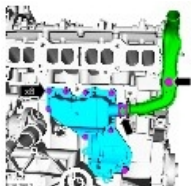

817 0000 02

22.

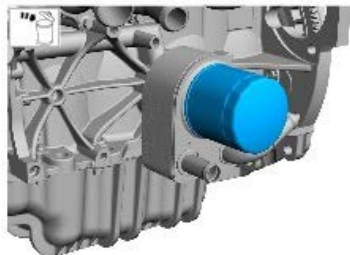


817 0000 03

23.




817 0000 04

24. Use Special Service Tool: 303-293.

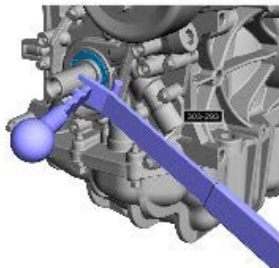


817 0000 05


25.

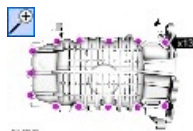


26.

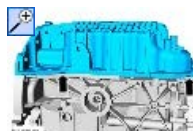

27.

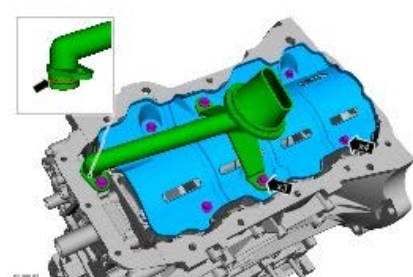

28. **NOTE:** Note the different lengths of the bolts.

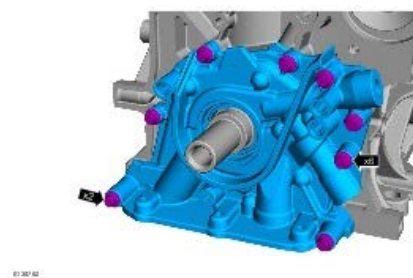

29.

